

Register your products and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

4000 Series

# Quick start guide

**PHILIPS**



**English**

Before using your product, read all accompanying safety information.

 



(The relevant parameters of instructions are variable, without prior notice, if there is any discrepancy, please in accordance with actual object.)



English


What's in the box

(32")

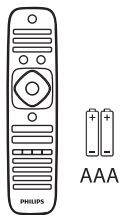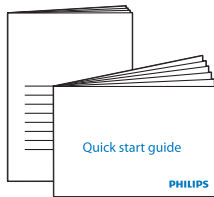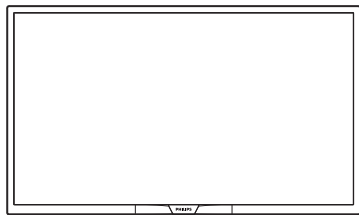

(4 pcs)

 1





English


Mount the stand

(32")

 
1

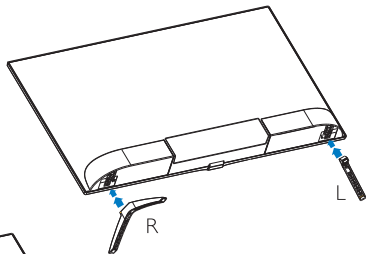

2

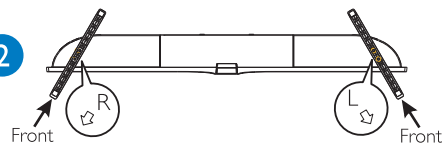

3

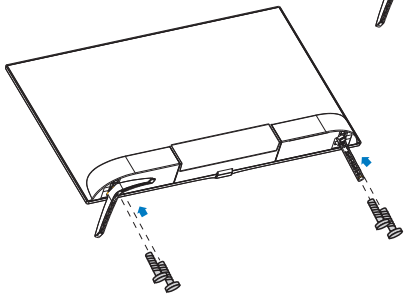






# 2


English

Connect

(32")

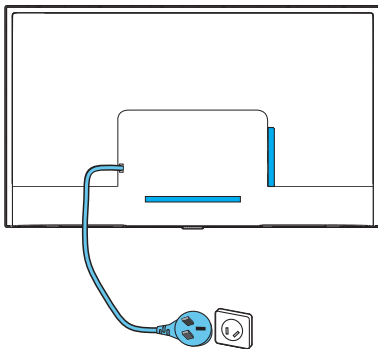

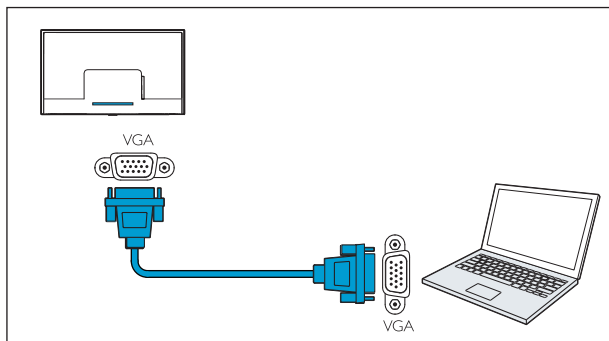
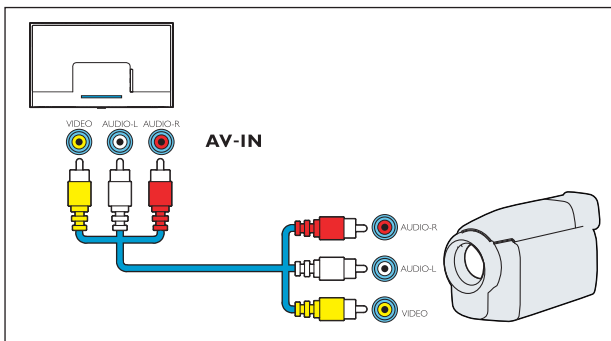
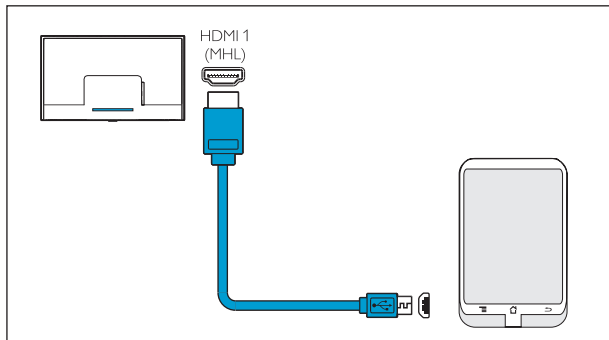
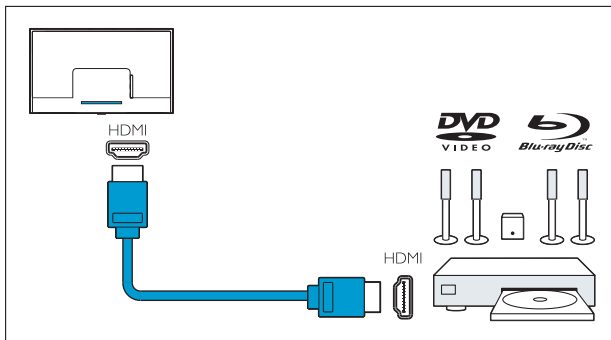


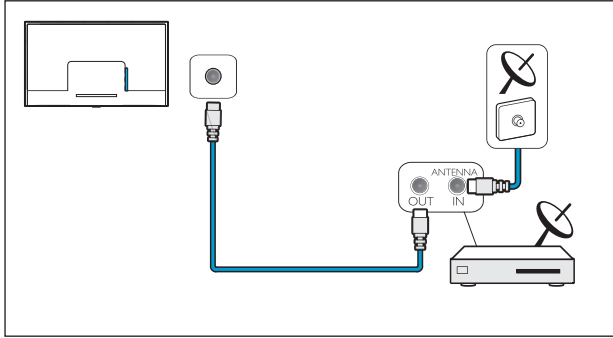

# 3

English

Insert batteries

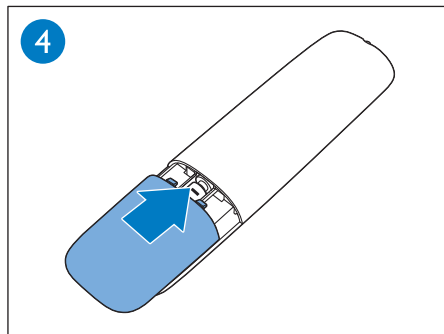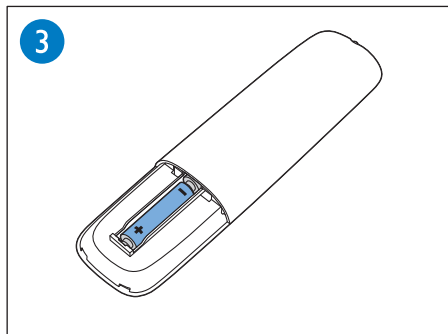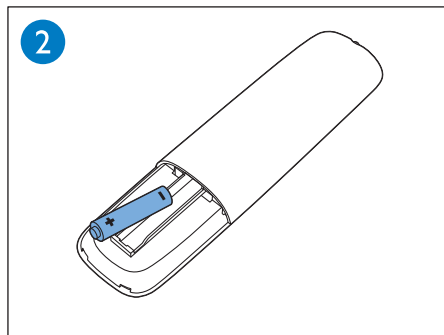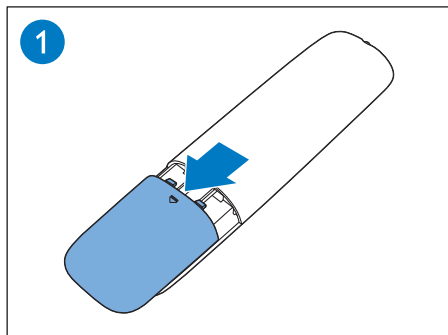






English

To wall mount, purchase a suitable bracket.

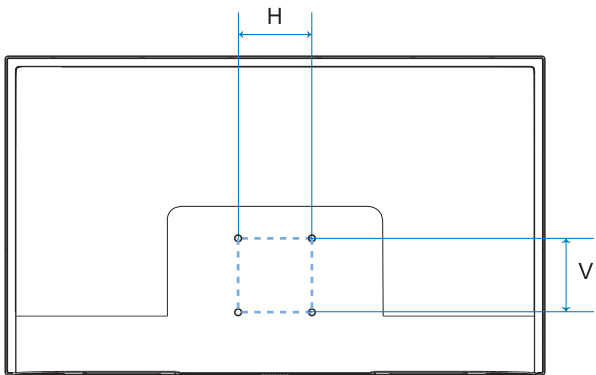


TV	H	V
80 cm / 32"	100 mm	100 mm

# 4

**English** Press the  key on the back of the TV or on the remote control to turn on the TV.

(32")

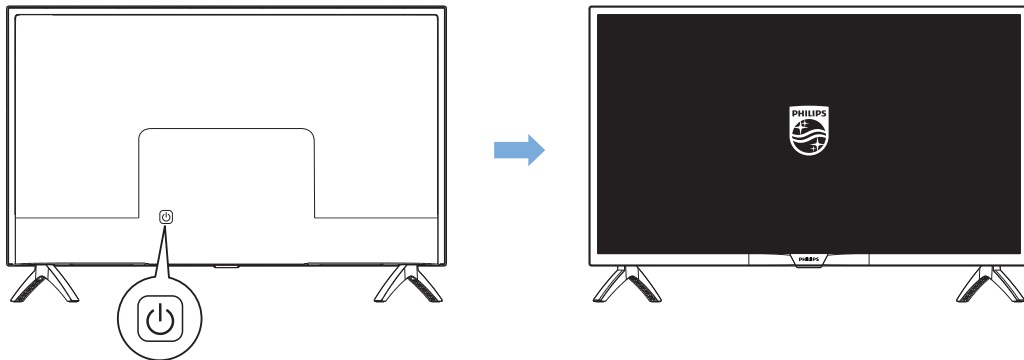



**English** Please refer to the User's Manual and the Philips support website for more operating instructions.





All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips' shield emblem are trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

2017 © TPVision Europe B.V. All rights reserved.  
[philips.com](http://philips.com)

