

OLED TV

# **USER MANUAL**

Read the manual carefully and ensure you have fully understood its contents before operating this device for the first time.

# Contents

## Declaration and Important Safety Precautions

Declaration .....	2
Disposal of Used Electrical & Electronic Equipment .....	3
Warning .....	3
Safeguards .....	4

## 1-Shortcuts Instructions

1.1 Turning your TV on or off .....	6
1.2 Selecting the Input Source .....	6
1.3 Using the Live TV .....	6
1.4 EPG .....	8
1.5 PVR/T.Shift .....	9

## 2-Menu

2.1 Using the Menu Function.....	10
2.2 Using the Settings Menu .....	11
2.3 Using the Picture Menu .....	11
2.4 Using the Sound Menu .....	13
2.5 Using the Network Menu .....	14
2.6 Using the Channel Menu .....	15
2.7 Using the System Menu .....	16
2.8 Using the Support Menu .....	19

## 3-Advanced Features

3.1 Getting familiar with the Home screen .....	20
3.2 Apps .....	21
3.3 Media .....	22
3.4 Using Anyview Cast to mirror content from your device to the TV screen .....	23
3.5 Panel Refresh .....	23
3.6 Software updates for your TV.....	24

## 4-Other Information

4.1 Troubleshooting .....	25
---------------------------	----

# Declaration

## Declaration

---

---

Any content and service accessed through this device, while only intended for individual non-commercial use, shall be the property of the applicable third party and subject to protection by regulations and laws on copyright, patent, trademark and other intellectual property rights. No part of such content and service may be modified, duplicated, published, uploaded, distributed, translated, marketed, or used to make and distribute products derived from it without the prior permission of the content owner or service provider.

You acknowledge and agree explicitly that you will solely bear the risk associated with the use of this device, and further you will solely bear any risk related to satisfactory quality, performance and accuracy for any content and service accessed through this device. To the maximum extent permitted by applicable law, this device and any third party's content and service is provided as it is without any guarantee, express or implied.

Manufacturer hereby declare explicitly that Manufacturer shall not be held liable for any guarantee and conditions, express or implied, related to this device and any content and service, including but not limited to warranty on marketability, satisfactory quality, fitness for a particular purpose, accuracy, quiet use and non-violation of any third party's rights; to the maximum extent permitted by applicable law, Manufacturer gives no guarantee on the accuracy, validity, timeliness, legitimacy and completeness of any content or service provided through this device, or the fitness of such device, content or service for your particular requirement, or the protection from interruption and error during operation of such device, content or service; to the maximum extent permitted by applicable law, in any case, including fault or neglect, Manufacturer shall not be held liable for legal actions or indemnity obligation arising from any consequence as a result of or related to any information loaded in this device or use of such device, content or service by you or any third party .

Any content and service provided as it is together with this device shall be the property of the applicable third party, therefore Manufacturer gives no declaration or warranty on modification, suspension, cancellation, termination or abortion thereof, and shall not be held liable for legal actions or indemnity obligation arising thereof.

Manufacturer reserves the rights to restrict the use or access of certain content or service. As the content and service are transmitted through third party's network and transmission facilities, Manufacturer undertakes no customer service thereof or the obligation for such customer service.

### **Disclaimer:**

**Images throughout this document are for illustrative purposes only and may differ from the actual product.**

## Important Safety Precautions



This symbol alerts user about the presence of a dangerous voltage not isolated inside the product which can be sufficiently powerful to constitute a risk of electrocution.



This symbol alerts user about the presence of important operating instructions and maintenance in the document enclosed in the package.



**ATTENTION**  
**RISK OF SHOCK**  
**ELECTRIC**



Do not open the back cover.

In no case the user is allowed to operate inside the TV set.  
Only a qualified technician is entitled to operate.

## Disposal of Used Electrical & Electronic Equipment



Packaging and electrical goods should be recycled appropriately, and not treated as household waste. Please dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipment waste. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## Warning

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

# Important Safety Precautions

## Safeguards

---

---

Please read the following safeguards for your TV and retain for future reference. Always follow all warnings and instructions marked on the television.

1. A note about safety and operating instructions

Read and follow all safety and operating instructions, and retain them safely for future reference.

2. Heed Warnings

Adhere to all warnings on the appliance and in the operating instructions.

3. Cleaning

Unplug the TV from the wall outlet before cleaning. Do not use liquid, abrasive, or aerosol cleaners. Cleaners can permanently damage the cabinet and screen. Use a lightly dampened cloth for cleaning.

4. Wall Bracket

Wall brackets are not supplied with this product. After market brackets may be available to purchase locally. Please refer to the specification page for dimensions.

5. Water and Moisture

Avoid dripping or splashing of liquids onto the product. Objects filled with liquids, such as vases, should not be placed on the product.

6. Setting

Do not place this TV on an unstable cart, stand or table. Placing the TV on an unstable base can cause the TV to fall, resulting in serious personal injuries as well as damage to the TV. Use only a cart, stand, bracket or table recommended by the manufacturer or salesperson.

7. Ventilation

Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the TV and to protect it from overheating. Do not cover the ventilation openings in the cabinet and never place the set in a confined space such as built-in cabinet unless proper ventilation is provided. Leave a minimum 10cm gap all around the unit.

8. Power Source

This TV should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company.

9. Power-Cord Protection

Power- supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plug, wall outlets, and the point where they exit from the TV. MAIN plug is used as the disconnect device, the disconnect device shall remain readily operable.

10. Lightning

For added protection for this TV during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the TV due to lightning or power-line surge.

## Important Safety Precautions

### 11. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. Where installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

### 12. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

### 13. Object and Liquid Entry

Never push objects of any kind into this TV through openings as they may touch dangerous voltage points or short-out parts that could result in fire or electric shock. Never spill liquid of any kind on or into the TV.

### 14. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the TV, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges.

### 15. Servicing

Do not attempt to service this TV yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

### 16. Damage Requiring Service

Unplug the TV from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- (a) When the power - supply cord or plug is damaged.
- (b) If liquid has been spilled, or objects have fallen into the TV.
- (c) If the TV has been exposed to rain or water.
- (d) If the TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the TV to its normal operation.
- (e) If the TV has been dropped or the cabinet has been damaged.
- (f) When the TV exhibits a distinct change in performance - this indicates a need for service.

### 17. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

### 18. Safety Check

Upon completion of any service or repair to the TV, ask the service technician to perform safety checks to determine that the TV is in safe operating condition.

### 19. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

### 20. Fire

The product should be situated away from naked flame sources such as lighted candle.

### 21. Off-gassing

The TV smells of plastic is normal and will dissipate over time.

## Shortcuts Instructions

You can use shortcuts on the remote control for fast operation. Refer to the “ Quick Setup Guide ” for more information.

### 1.1 Turning your TV on or off

---

To turn your TV on or off :

1. Plug the AC power cord into a socket outlet of AC power supply.
2. When the TV is powered on, press the **[⏻]** button on the remote control, to turn TV on or off.

#### 📌 NOTES

- When your TV is in standby mode, it is still consuming power. To completely disconnect power, please remove the mains plug from the mains socket.
- If your TV does not receive an input signal for several minutes, it automatically goes into standby mode.

### 1.2 Selecting the Input Source

---

Select the Input Source depending on the video device you have connected to your TV.

To select the input source:

1. Turn on your TV, then press the **[INPUT]** button on the remote, the list of Source appears.
2. Press the **[^ / v / < / >]** buttons to select the input source.
3. Press the **[OK]** button to confirm your selection.

### 1.3 Using the Live TV

---

To view broadcast programs, press the **[Live TV]** button on your remote.

#### Channel search guide

When switching to Live TV, the TV detects the presence of the channel list information (Channel scan must have been completed). If the scan has not yet been completed, a prompt will appear to begin scanning for channels. Press the **Begin scanning** button to enter the channel search interface.

#### Launch Live TV

After channel tuning is done for the first time, the screen will display Live TV operating tips.

**[OK]** load channel list.

**[Up]** load info bar.


**[Down]** load PVR/T.Shift/Recording List.

**[Back]** jump to previous channel.

#### Viewing channel information

As you use the **[CH^ / CHv ]** button on your remote to scroll through channels, an information banner appears on the top of the screen.

## Shortcuts Instructions

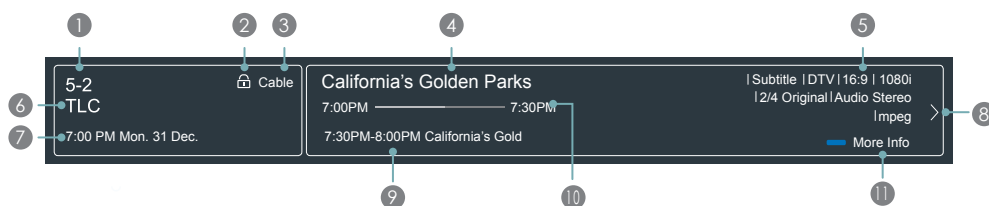

The information banner displays the following information:

- 1 Channel number
- 2 Lock status
- 3 Input
- 4 Program name
- 5 Show identification
- 6 Channel name
- 7 Current date and time
- 8 Prompt
- 9 Beginning and end time of the next program
- 10 Start/Stop time progress bar of the current program
- 11 More info

If you are watching a particular channel, you can also press the up arrow button of your remote to view channel information.

### Viewing a channel list

After you have done an automatic channel scan (if you're using an antenna) or receiving your channels through a cable provider, you can view your list of channels by pressing **[OK]** button on your remote. You will see the channel list display on the right side of the screen.

### Creating a Favorites List

To quickly access your most-watched channels, you can create a Favorites List.

To create your Favorites List:

1. Press the **[⚙]** button on your remote to enter the Settings menu.
2. Select **Channel > Channel Edit > FAV > Edit > Add channels**.
3. Using the **[▲ / ▼]** buttons of your remote, select a channel and press **[OK]** button.

A heart-shaped indicator will appear beside the channel as confirmation that it has been successfully added.

### Viewing your Favorite list

To view channels that you've added to your Favorites List, press **[OK]** button on your remote to call out the channel list.

The channel list appears on the right side of the screen and heart-shaped icons are shown next to the channels that make up your Favorites List.




# Shortcuts Instructions

## 1.4 EPG

It provides convenience to check TV programs that will be available in the next 7 days. The information displayed by the EPG is made available by the commercial television networks for digital channels only. The EPG also provides a simple way to program the recording of your favorite programs and a reminder function which can switch channel automatically at scheduled time so that you do not miss programs of interest. (The availability and amount of programme information will vary, depending on the particular broadcaster).

- Press the **[EPG]** button on the remote control to display channel information on program guide list.

<b>Watch</b>	When a current program is selected, press the <b>[OK]</b> button to watch it in full screen mode.
<b>PVR/Reminder</b>	<p>Press the [<b>^</b> / <b>v</b>] buttons to select the channels, press the [<b>&lt;</b> / <b>&gt;</b>] buttons to select program based on the time schedule.</p> <p>Press the <b>[OK]</b> button to select PVR or Reminder.</p> <p>Press the [<b>^</b> / <b>v</b> / <b>&lt;</b> / <b>&gt;</b>] buttons to change and set different options.</p> <ul style="list-style-type: none"> <li>· Select and set Start time/End Time: Press the [<b>&lt;</b> / <b>&gt;</b>] buttons to move to the position you want to set, press the <b>[OK]</b> button, and then press the [0~9] buttons to input the desired numbers. (Selecting and setting end time is only available for PVR)</li> <li>· Repeat (Reminder): You can select from Once, Daily, Mon to Fri and Weekly. Repeat (PVR): You can select from Once, Daily, Mon to Fri, Sat to Sun, Sun, Mon,Tue, Wed, Thu, Fri and Sat.</li> </ul> <p><b>NOTES</b></p> <ul style="list-style-type: none"> <li>· Reminder is only available for programmes that haven't been aired yet.</li> <li>· A storage device must be attached to the television for recording purposes.</li> <li>· The TV will record the programme even in standby mode.</li> </ul>
<b>Page Up/Down</b>	Press the [ <b>CH^</b> / <b>CHv</b> ] buttons to move programme listing page up/down.
<b>Program details</b>	Press the <b>[INFO]</b> button to display detailed information of the selected program.
<b>Schedule</b>	Press the <b>[RED]</b> button to view a list of scheduled reminders and recordings.
<b>24-</b>	Press the <b>[YELLOW]</b> button to go backwards a day.
<b>24+</b>	Press the <b>[BLUE]</b> button to move forwards a day.

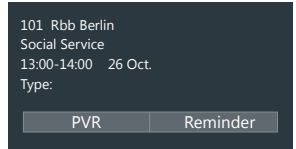

## 1.5 PVR/T.Shift

---

### PVR

The PVR enables the user to easily record the digital television content for later viewing. The function is to be used in DTV source only. The format of storage disk is recommended to be FAT32 or NTFS. This option does not commerce if the data storage device has not been connected.

There are two options for recording, the first option is to use Electronic Program Guide (EPG), the second option is to press the [v] button to select PVR or T.Shift.

Press the [v] / [■] button to display the recording progress bar when there is no progress bar appeared, press the [■] button to stop record, a \*.PVR file will be saved. The files can be played back in Media.

### T.Shift

This option allows the user to watch a live broadcast (DTV only) with a delay. Since the function record the program temporarily onto a hard disk only. Please connect a hard disk and the storage capacity should be no less than 2GB. Otherwise the recording will not commence.

Press the [v] button on the remote to display the menu, press the [II] button to pause the live broadcast and press the [▶] button to play. Press the [◀◀] button to rewind and press the [▶▶] button to fast forward. Press the [■] button to exit the function and watch the current broadcast.

### 📌 NOTES

- When connecting a hard disk, always connect the mains adapter of the connected device to the power supply.
- If a USB 1.1 or USB2.0 device requires more than 500mA or 5V, the USB device may not be supported. Max supported current for USB 3.0 device is 1A. Exceeding the max supported current may result in damage or data loss.
- The maximum supported storage space of the hard disk is 2T.
- If you want to store the video streaming of a DTV program, the transfer rate of the USB storage device should be no less than 5MB/s.
- The PVR and T.Shift functions doesn't support analogue channels.
- The PVR function is disabled for scrambled channels (CI module).
- The T.Shift function is disabled for channels locked with Channel Lock or scrambled channels (CI module or password needed).

## 2.1 Using the Menu Function

---

To quickly access menu function, press the [  ] button on your remote.

### Audio Language

Select a desired language from the list. (Only available for DTV channels)

#### NOTE

- This function is only available on certain models in specific geographical areas.

### Subtitle

Select desired subtitles from the list if the selected channel supports multi-language subtitles. (Only available for DTV channels)

### Headphone Volume

Adjust the volume of the headphone when the headphone is connected.

### Audio Track

Select a desired audio track from the list if the video has the multiple audio tracks. (Only available for ATV channels)

 



### Picture Mode

Select the optimal picture mode for your TV viewing conditions. There are five types of picture modes available: Standard, Natural, Cinema, Dynamic, Football.

### Sound Mode

Select a preset sound mode to suit the type of content you are listening to: Standard, Theatre, Music, Speech, Late Night and Sports.

### Audio Only

When you select this option, the screen will not display the picture. You can only listen the audio. Press any button except the [  / VOL  / VOL  /  ] buttons to restore operation.

### Teletext

Display the teletext mode.

#### NOTE

- This function is only visible when the selected channel has the corresponding information.

### Recording List

View recording schedule list. You can edit the settings of the selected schedule or delete it. (Only available for TV mode)

### HbbTV

The global switch to enable or disable HbbTV functionality for all channels. (Only available for DTV channels)

#### NOTE

- This function is only available on certain models in specific geographical areas.

### Settings

The Settings Menu consists of the following settings: Picture, Sound, Network, Channel, System and Support.

## 2.2 Using the Settings Menu

1. Press the [⚙️] button on your remote to enter the Settings menu.

The **Settings Menu** consists of the following settings:

- **Picture**
- **Sound**
- **Network**
- **Channel**
- **System**
- **Support**

2. In each menu, you can:

- Press the [⏪ / v / < / >] buttons to select an item,
- Press the [OK] buttons to enter the sub-menu or to set on or off,
- Press the [< / >] buttons to adjust the value,
- Press the [BACK] button to return to the previous menu.

3. Press the [EXIT] button to exit the menu.

### 📌 NOTE

- The menus in the user manual may vary slightly from the actual screen.

## 2.3 Using the Picture Menu

<b>Picture Mode</b>	Select a preset picture mode to best suit the content you're viewing.
<b>Aspect Ratio</b>	Adjust the Aspect Ratio to stretch or zoom in on your picture.
<b>Picture Mode Settings</b>	<p>Adjust display settings for each Picture Mode.</p> <ul style="list-style-type: none"> <li>• <b>Apply Picture Settings:</b> Adjust current picture mode to apply to all sources or just current source.</li> <li>• <b>OLED Light:</b> Set the overall brightness of the screen.</li> <li>• <b>Brightness:</b> Adjust the Brightness level to generate lighter or darker images.</li> <li>• <b>Contrast:</b> Adjust the Contrast level to increase or decrease how bright images appear.</li> <li>• <b>Color Saturation:</b> Adjust the color intensity of the picture for a more vibrant image.</li> <li>• <b>Sharpness:</b> Adjust how sharp or soft edges of images appear.</li> <li>• <b>Tint:</b> Adjust the colors from a green to magenta tint to view the natural skin tones of people on the screen.</li> </ul>

## Picture Mode Settings

- **Game Mode:** Best suited for PC or Games console. Reduces Input Lag and improves responsiveness.  
**NOTE:** Some models don't support this function.
- **Adaptive Contrast:** Automatically darken dark areas and lighten light areas of images to see more details.
- **Ultra Smooth Motion:** Reduce seeing afterimages that are left on the screen when viewing fast-moving objects.  
**Judder Reduction:** To enhance picture fluency, try to reduce picture judder. However, in some cases this may cause picture blur.  
**NOTE:** Some models don't support this function.
- **Blur Reduction:** To avoid losing picture detail, try reducing the screen blur. This may however, cause screen judder.  
**NOTE:** Some models don't support this function.
- **Noise Reduction:** Improve how clear the picture appears by reducing noise.
- **MPEG Noise Reduction:** Reduce MPEG block noise and provides clearer edge transitions.  
**NOTE:** Some models don't support this function.
- **Color Temperature:** Adjust how warm(red) or cool(blue) the white areas of an image appears.
- **Color Gamut:** Change the range of Colors the TV displays.  
**NOTE:** Some models don't support this function.
- **Color Tuner:** Adjust the Hue, Saturation and Brightness of Color settings.
- **White Balance:** Adjust the intensity of red, green and blue lights to view the true Colors of all images in the picture.
- **Black Level:** Adjust the HDMI signal range to be more suitable for the content.
- **Gamma Adjustment:** Adjust the Gamma to alter how the TV will respond to the grayscale content. In a dark room choose a Higher number like 2.2. In a brighter area select a Lower number like 2.0. In general, 2.4 is normally recommended.  
**NOTE:** Some models don't support this function.
- **RGB Only Mode:** View images based on default settings or choose the Color red, blue or green.
- **Restore current mode to default:** Restore all the picture settings in the current picture mode to the factory default values.
- **Overscan:** Change the video size settings to slightly crop the edges of the displayed image.

## Panel refresh

Use panel refresh to reduce image retention effects.

## 2.4 Using the Sound Menu

<b>Sound Mode</b>	Select a preset sound mode to suit the type of content you are listening to.
<b>Headphone</b>	<ul style="list-style-type: none"> <li>• <b>Headphone Mode:</b> Change the way audio is sent through the type of device that's connected to your TV Audio Out port.</li> <li>• <b>Headphone Volume:</b> Independently adjust the volume of audio out devices.</li> </ul>
<b>Sound Mode Settings</b>	<p>Customize selected Sound Mode.</p> <ul style="list-style-type: none"> <li>• <b>Apply Audio Settings:</b> Adjust current sound mode to apply to all source or just current source.</li> <li>• <b>TotalSonics™ Total Sonics:</b> Optimizes overall sound quality by increasing bass, widening the sound field and provides a clear, natural dialog.</li> <li>• <b>TotalVolume™ Total Volume:</b> Maintains consistent loudness levels from wide dynamic range programmes, loud commercials, and channel or input changes.</li> <li>• <b>TotalSurround™ Total Surround:</b> Provides surround sound experience by utilizing psychoacoustic processing to place sounds beside, behind and above the viewer. For best results use with Total Sonics.</li> <li>• <b>Equalizer:</b> Boost the volume at different frequencies.</li> <li>• <b>Subwoofer:</b> Built-in Subwoofer switch. <ul style="list-style-type: none"> <li>☒ <b>NOTE:</b> The feature is only available on selected models.</li> </ul> </li> <li>• <b>Bass Boost:</b> Built-in Bass Adjustment. <ul style="list-style-type: none"> <li>☒ <b>NOTE:</b> The feature is only available on selected models.</li> </ul> </li> <li>• <b>Restore current mode to default:</b> Restore all of the audio settings in current audio mode to the factory default values.</li> </ul>
<b>Speakers</b>	<ul style="list-style-type: none"> <li>• <b>Audio Output:</b> Select the speakers which you want to use.</li> <li>• <b>Digital Audio Out:</b> Select the digital audio output format that best suits the audio device type.</li> <li>• <b>Digital Audio Delay:</b> Adjust the digital audio output delay time to sync sound from an external speaker with the images on the TV.</li> <li>• <b>Lip Sync:</b> Synchronize the displayed image with the audio output.</li> <li>• <b>Balance:</b> Adjust the left and right speaker strength to optimize audio for a specific location.</li> </ul>
<b>Audio Type</b>	<ul style="list-style-type: none"> <li>• <b>Audio Type:</b> Select the audio type of programmes.</li> <li>• <b>Voiceover Output:</b> Select the voiceover audio out.</li> <li>• <b>Voiceover Volume:</b> Independently adjust the volume of voiceover. <ul style="list-style-type: none"> <li>☒ <b>NOTE:</b> Audio Type is only available on certain models in specific geographical areas.</li> </ul> </li> </ul>

## 2.5 Using the Network Menu

<b>Network Configuration</b>	<p>Set up the network to gain full access of Smart TV features.</p> <ul style="list-style-type: none"> <li>• <b>Connection Type: Ethernet</b> Choose a wired network connection to access the Internet. IP Setting: Configure the IP setting for your network connection.</li> <li>• <b>Connection Type: Wireless</b> Choose a wireless network connection to access the Internet. Advanced Settings: Configure the advanced wireless network settings for the TV. Refresh: Refresh wireless network. Add Network: You can add wireless network.</li> <li>• <b>Connection Type: Off</b> Turn off the Internet connection.</li> </ul>
<b>Internet Connection</b>	<ul style="list-style-type: none"> <li>• <b>Connection Test:</b> Start a network connection test.</li> <li>• <b>Network Information:</b> View information about your network connection.</li> </ul>
<b>Wake on Wireless Network</b>	<p>Using a wireless connection, turn on your TV with a screen-cast feature inside an app.</p>
<b>Wake on LAN</b>	<p>Using an Ethernet connection, turn on your TV with a screen-cast feature inside an app.</p>

## 2.6 Using the Channel Menu

<b>Auto Scan</b>	Automatically scan for channels to view programmes from your TV source.
<b>Channel Edit</b>	Manually edit the channel list order to your preference.
<b>Advanced Settings</b>	<p>Adjust advanced settings for Channel.</p> <ul style="list-style-type: none"> <li>• <b>Manual Scan:</b> Perform manual channel scan for ATV and DTV.</li> <li>• <b>ATV Fine Tuning:</b> Fine tuning current channel to improve the programme picture.</li> <li>• <b>Channel List Auto-Update :</b> Allow your TV auto-update the channel list from the content provider.</li> <li>• <b>CAM Settings :</b> <ul style="list-style-type: none"> <li>• <b>Common Interface:</b> Review CAM boot menu</li> <li>☒ <b>NOTE:</b> <ul style="list-style-type: none"> <li>• CI Card is not supported in some regions so this option may not be available.</li> </ul> </li> <li>• <b>CI card PIN:</b> Set the CI CAM pin.</li> <li>☒ <b>NOTE</b> <ul style="list-style-type: none"> <li>• CI Card is not supported in some regions so this option may not be available.</li> </ul> </li> <li>• <b>CAM Profile Search:</b> Quick channel scan with CAM.</li> <li>☒ <b>NOTE</b> <ul style="list-style-type: none"> <li>• CI Card is not supported in some regions so this option may not be available.</li> </ul> </li> </ul> </li> </ul>



## 2.7 Using the System Menu

<p><b>Time</b></p>	<p>Set the current time based on your location.</p> <ul style="list-style-type: none"> <li>• <b>Time Format:</b> Set the time to display in a 12 or 24-hour format.</li> <li>• <b>Jalaali:</b> Turn the <b>Jalaali</b> On or Off.</li> </ul> <p><input checked="" type="checkbox"/> <b>NOTE:</b> This function is only available on certain models in specific geographical areas.</p> <ul style="list-style-type: none"> <li>• <b>Date/Time:</b> Select the mode Manual or Auto and set the Date and Time if select Manual.</li> <li>• <b>Time Zone:</b> Select your location time zone.</li> <li>• <b>Daylight Savings:</b> Select whether to apply Daylight Savings Time to the TV.</li> </ul>
<p><b>Timer Settings</b></p>	<p>Adjust the timer settings to suit your preference.</p> <ul style="list-style-type: none"> <li>• <b>Sleep Timer:</b> Set the sleep timer to automatically turn the TV Off within a specified time.</li> <li>• <b>Power On Timer:</b> Set the clock for the time you want the TV to turn on automatically.</li> <li>• <b>Power Off Timer:</b> Set the clock for the time you want the TV to turn off automatically.</li> <li>• <b>Menu Timeout:</b> Set the amount of time that you'd like for the menu to display.</li> <li>• <b>Auto Sleep:</b> Set the amount of time that you'd like for TV auto power off without any activity: Off, 3H, 4H.</li> </ul> <p><input checked="" type="checkbox"/> <b>NOTE:</b> Auto Sleep is only available on certain models in specific geographical areas.</p>
<p><b>System PIN</b></p>	<p>Change your PIN that you use to access Parental Controls, Auto Channel Scan and Reset To Factory Defaults.</p> <p><input checked="" type="checkbox"/> <b>NOTE:</b> If you forget your password, call the <b>Consumer Electronics Care Center</b>.</p>
<p><b>Parental Controls</b></p>	<p>Turn On Parental Controls to block children from being able to view certain programmes. You can do this by creating a 4-digit password.</p> <ul style="list-style-type: none"> <li>• <b>Locks:</b> Turn the Lock system On or Off.</li> <li>• <b>Block Time:</b> Block certain channels and programmes during certain periods of time.</li> <li>• <b>Channel Block:</b> Block programmes by channels when you turn on the Parental Controls feature.</li> <li>• <b>Programme Block:</b> Certain programmes are blocked when you activate the parental controls settings.</li> <li>• <b>Input Block:</b> Block content from devices that are connected to certain TV ports.</li> <li>• <b>Restore Parental Control Defaults:</b> Restore Parental Control back to the factory default setting.</li> </ul>

# Menu

## Language and Location

Select the language used for this TV and you location.

- **Location:** Choose the location from where you will watch your TV.
- **Menu Language:** Set the default language for the TV menu.
- **Primary Audio:** Set the default audio output language for the type of digital broadcast content that you're viewing.
- **Secondary Audio :** Set the secondary audio output language for digital broadcast content.
- **Primary Subtitle:** Set the default subtitle language for digital broadcast content.
- **Secondary Subtitle :** Set the secondary subtitle language for digital broadcast content.
- **Digital Teletext :** Set the Teletext language.
- **Decoding Page :** Adjust Teletext decoding.

## Application Settings

Set settings for apps on your TV.

- **Anyview Stream:** Share video, music or other content from compatible device on to your TV screen.
  - **Netflix:** Remove this TV from your Netflix account. Please contact Netflix if you want to stop being billed for your service.
  - **Clear Cache & Cookies:** Clear cache, cookies, user data and temporary files for application, browser and HbbTV.
  - **HbbTV:** Disable or enable HbbTV function.
- NOTE:** HbbTV is only available on certain models in specific geographical areas.

## HDMI & CEC Functions

Configure how to control CEC-enabled devices with your TV remote.

- **HDMI 2.0 Format:** Match the connected device output format. Select Enhanced for devices with output of 4K, 60Hz, 4:4:4, 4:2:2 or 4:2:0, 10 bit and above.
- **CEC Control:** Allow HDMI devices to control each other.
- **Device Auto Power Off:** Automatically turn off HDMI CEC devices when the TV is turned off.
- **Device Auto Power On:** The device with CEC function that is connected to current input will be powered on when TV is powered on.
- **TV Auto Power On:** Allow the TV to turn On with CEC-enabled devices.
- **Detect:** Allow CEC-enabled devices to communicate with each other when connected through an HDMI cable.

### NOTES

- HDMI cables must be used to connect HDMI CEC-compatible devices to your TV.
- The HDMI CEC feature of the connected device must be turned on.
- If you connect an HDMI device that is not HDMI CEC-compatible, all the HDMI-CEC control features do not work.
- Depending on the connected HDMI device, the HDMI-CEC Control feature may not work.

## Advanced Settings

Access the Advanced Settings menu.

- **TV Name:** Choose a name for your TV. The name will be shown to devices that are available for sharing data.
- **PVR&Time-Shift Settings:** Initialize the external USB disk to support PVR and Time-Shift. (Since the function record temporary the program onto a hard disk only.)
- **Power Indicator:** Set the power indicator light to stay On or Off when standby mode.
- **Indicator Light Setting:** Set the Indicator light.

Off: Always Off.

Power: Off when standby and On when watching TV.

Always: Always On.

### **NOTES**

- The standby energy consumption of television is different when you select different options.
- Some models don't support this function.
- **Input Labels:** Edit the input labels.
- **Notifications:** Allow pop-up notifications to appear for useful information and events that occur with your TV.
- **Setup Wizard:** Use the Setup Wizard for instructions to help you set up your TV.
- **Store Mode:** Set the TV to use in Home or Store Mode.

## 2.8 Using the Support Menu

<b>System Info</b>	<p>View system information.</p> <ul style="list-style-type: none"> <li>• <b>Signal Info:</b> Show signal information of current input.</li> <li>• <b>Network Connection:</b> View your TV's network connection information.</li> <li>• <b>Input Connections:</b> View your TV's input connection information.</li> <li>• <b>Version:</b> View your TV's software version and hardware code.</li> </ul>
<b>Self Diagnosis</b>	<p>Perform self diagnosis to test sound, picture and connections.</p> <ul style="list-style-type: none"> <li>• <b>Picture Test:</b> Perform this test to test your TV's picture.</li> <li>• <b>Sound Test:</b> Perform this test to test your TV's sound.</li> <li>• <b>Network Test:</b> Perform this test to test network connection.</li> <li>• <b>Input Connection Test:</b> Show all related information with external connections.</li> </ul>
<b>System Update</b>	<p>Set your TV to receive the latest firmware.</p> <ul style="list-style-type: none"> <li>• <b>Check Firmware Upgrade:</b> Check to ensure that your TV has received the latest firmware.</li> <li>• <b>Check OAD Upgrade :</b> Check to ensure that your TV has received the latest firmware via the tuner.</li> </ul> <p><b>NOTE:</b> This function is only available on certain models in specific geographical areas.</p> <ul style="list-style-type: none"> <li>• <b>Upgrade from USB:</b> Upgrade TV software from USB device.</li> </ul> <p><b>NOTE:</b> Some models don't support this function.</p>
<b>Disclaimer</b>	<p>Click to read the disclaimer details.</p>
<b>Restore To Factory Default</b>	<p>Restore your TV back to the factory default.</p>

## 3.1 Getting familiar with the Home screen


---

The simple design of the Home screen menu makes it easy to navigate. It serves as the central location to access **Notifications**, **Apps**, **LiveTV**, **Inputs**, **Media** and **Settings**.

To access the Home screen, press the [🏠] button on your remote control and use the arrows on the D-pad to make your selection.

### Indicators and Icons on the top of the Home screen

You can always view the current time at the top left corner of the Home screen.

If your TV is connected to the Internet through a wireless connection, then an icon  will display at the top right corner of the screen. This location makes it very convenient for you to determine if you still have Internet connectivity when you use the TV.

### Names of sections that appear on the Home screen

The Home screen displays the following section names:

- **Notifications**
- **Apps**
- **LiveTV**
- **Inputs**
- **Media**
- **Settings**

### Notifications

If your TV is connected to an external device, the screen will be prompted.

### Apps

This is the one location where you have access to all the apps on your TV. You can enjoy a wide range of services including video streaming and web browsing.

### LiveTV

Switch to LiveTV input.

### Inputs

All inputs are listed here. You can select a connected external device, then the output of the selected device is displayed on the TV's screen.

### Media

You can play media content saved on external storage devices.

### Settings

Open the settings menu.

### Editing the Home screen

Press the [v] button on your remote control to add a new tile to the home page, Press the [^] button on your remote control to change the location of any tile already listed.

### 3.2 Apps

---

Numerous factory-installed apps are available for you to choose from for your entertainment preferences.

#### Installing an App

Even though your TV has numerous factory-installed apps, there may be others that you'd like to download.

To install an app:

1. From the Home screen, click on the **Apps** to select the **VEWD** icon.
2. Navigate to the **SEARCH** tab at the top of the screen.
3. Begin typing the name of the app. As you begin typing the first two to three letters the **VEWD** icon suggests words to quicken your search time.
4. Use the navigation buttons of your remote to select the app. A page displays that shows a written description of the app.
5. Click on **ADD TO FAVORITES**.

#### Removing an App

You can only delete apps that you've installed to the TV. Some factory-installed apps can not be deleted.

To delete an app:

1. Use the navigation buttons on your remote to select the app that you want to remove.
2. Press the **'red'** button on your remote. A dialog message displays that asks do you want.
3. Click on **Delete**. The icon is removed from the Apps list screen.

 **NOTE:** If an app is deleted, the information related to that app is also removed.

# Advanced Features

## 3.3 Media

Media is a central location for you to upload and view or listen to different types of content (for example, your photos, music and movies) through the following methods:

- A USB thumb drive or hard drive
- Compatible mobile phone, tablet or other personal devices: You can stream movies, pictures and music that are stored on Compatible personal device and play or view the content on your TV.

### File formats that may be supported

**NOTE:** Due to differences in programming tools and other factors, some of the file formats that are listed may or may not be supported.

Medium	File Format
Video	AVI, MP4, MKV
Picture	JPG, BMP, PNG, GIF
Music	MP3

### Browsing Content

To browse through content based on the type that you wish to access:

1. Navigate to the appropriate menu tab on far-right top the screen and select **All**, **Picture**, **Music** or **Video**, also you can find the file you want through the file type: **Name**, **Date Modified**, **Size**.
2. Press the [**▲ / ▼ / < / >**] buttons to select the name of the content/folder that contains your content.
3. Press the [**OK**] button to play/enter content/the folder.

If you want to close out of the Media center, press the [**EXIT**] button on your remote.

### Creating Playlist

You need to:

1. Press the [**GREEN**] button on the remote to create a playlist.
2. Select **Picture / Music / Video** that you want to play.
3. Press the [**GREEN**] button on the remote to play the list you have created.

### Playing background music during viewing pictures

You need to:

1. Create a music playlist as described above and press [**BLUE**] button on the remote to save the playlist.
2. Choose a picture to playback.
3. Press the [**≡**] button.
4. Set **Background music** to on.

### 3.4 Using Anyview Cast to mirror content from your device to the TV screen

---

The Anyview Cast is an app that enables you to share (or cast) a video, audio or image from compatible Android device to the TV.

#### From your tablet or phone

To mirror content from your tablet to the TV:

1. Press the [⚙️] button on your remote to enter the Settings menu. Go to **Network > Network Configuration** and select **Wireless**.
2. Press the [INPUT] button on your remote and select the **Anyview Cast**.
3. Turn on the wireless display function on your Android-based device.

📌 **NOTE:** Some Android-based devices may not support casting.

4. Find your TV in the list of devices that displays and select it.
5. Wait for the 'Creating Connection' progress bar to complete on the TV screen and the video or image will display in a moment.

### 3.5 Panel Refresh

---

Due to the optical characteristics of OLED, image retention may occur after the TV has been used for an extended period of time. A Panel Refresh is recommended to correct picture quality issues and prevent image retention.

Do not pull the plug from the socket when you want to turn off the TV. Please press the [⏻] button on the remote to turn the TV off and panel refresh will be operated automatically when TV is in standby mode.

Power indicator light will blink when panel refresh is in progress. The whole process will take about an hour, during the process, the screen will be turned off and TV will be shut down after the refresh completes.

You could also choose to manually start panel refresh.

To manually start panel refresh:

1. Press the [⚙️] button on your remote to enter the Settings menu.
2. Go to **Picture > Panel refresh**.

Red flashing light indicates panel refresh in progress.



### 3.6 Software updates for your TV

---

The software (also referred to as firmware) is part of what powers your TV. We will provide software updates to continuously enhance your TV and correct any issues that may impact your user experience; therefore, we recommend that you keep your TV connected to the Internet to receive updates when they are available. You can choose to receive updates automatically or check for software updates and install them manually.

#### Checking for the latest firmware / OAD

To manually check for the latest firmware:

1. Press the [⚙️] button to enter the Settings menu.
2. Go to **Support > System Upgrade > Check Firmware Upgrade / Check OAD Upgrade.**

#### 📌 NOTE

This function is only applicable in some countries.



#### What is Freeview Plus?

Freeview Plus is a new television service delivered via broadband providing a state of the art Electronic Program Guide (EPG) and seamless access to catch-up TV across the free-to-air networks with the simple press of a button.

#### How does it work?

First ensure the TV is connected to internet and an antenna system. Then when you're watching TV, you'll briefly see a prompt at the top left of the screen. Press the 'Green' button on your remote to launch Freeview Plus. More information about Freeview Plus can be found on <http://www.freeview.com.au/>

#### 📌 NOTE

- Freeview Plus service only available in Australia territories.

## Other Information

### 4.1 Troubleshooting

If the TV does not operate as usual or appears to be faulty please read carefully this section. Many operational issues can be resolved by users.

It is also advisable to unplug the TV from the AC socket on the wall for 60 seconds or more, then reconnect and start again. This simple procedure helps in restoring stable conditions for electric circuits and firmware of the unit.

Please contact Manufacturer Customer Care if the problem is unresolved or you have other concerns.

<b>SYMPTOMS</b>	<b>POSSIBLE SOLUTIONS</b>
No sound or picture.	<ul style="list-style-type: none"><li>● Check if the power cord is plugged into a powered AC outlet.</li><li>● Check to see if the LED light is on or not. If it is, then the TV is receiving power.</li></ul>
I have connected an external source to my TV and I get no picture and/or sound.	<ul style="list-style-type: none"><li>● Check for the correct output connection on the external source and for the correct input connection on the TV.</li><li>● Make sure you have made the correct selection for the input mode for the incoming signal.</li></ul>
When I turn on my television, there is a few second delay before the picture appears. Is this normal?	Yes, this is normal. That is the TV searching for previous setting information and initializing the TV.
Picture is normal, but no sound.	<ul style="list-style-type: none"><li>● Check the volume settings.</li><li>● Check if Mute mode is set "on".</li></ul>
Sound but no picture or black and white picture.	<ul style="list-style-type: none"><li>● If black and white picture first unplug TV from AC outlet and re-plug after 60 seconds.</li><li>● Check that the Color is set to 50 or higher.</li><li>● Try different TV channels.</li></ul>
Sound and picture distorted or appear wavy.	<ul style="list-style-type: none"><li>● An electrical appliance may be affecting TV set. Turn off any appliances, if interference goes away, move appliance farther away from TV.</li><li>● Insert the power plug of the TV set into another power outlet.</li></ul>
Sound and picture is blurry or cuts out momentarily.	<ul style="list-style-type: none"><li>● If using an external antenna, check the direction, position and connection of the antenna.</li><li>● Adjust the direction of your antenna or reset or fine tune the channel.</li></ul>
Horizontal/vertical stripe on picture or picture is shaking.	Check if there is interfering source nearby, such as appliance or electric tool.
The plastic cabinet makes a "clicking" type of sound.	"Click" sound can be caused when the temperature of the television changes. This change causes the television cabinet to expand or contract, which makes the sound. This is normal and the TV is OK.

## Other Information

Remote control does not work.	<ul style="list-style-type: none"><li>● Confirm that TV still has power and is operational.</li><li>● Change the batteries in the remote control.</li><li>● Check if the batteries are correctly installed.</li></ul>
Smart Television with wireless network capability Wi-Fi fail to join a local network.	<ul style="list-style-type: none"><li>● Configure the local wireless router or access point for WPA-PSK security before attempting to connect the TV to the Wi-Fi network.</li><li>● Follow instruction in the User Manual of the television to setup a wireless connection.</li></ul>
Red light (TV front indicator light) alternates between flashing for 3 or 5 times and off for 2 seconds.	Please restart the TV.
Red light (TV front indicator light) alternates between flash for 4 times and off for 2 seconds.	Screen may have some problems, please pull the plug and contact professional maintenance personnel.