



SÖLT

Top Load Washing Machine 5.5kg Capacity Quick Start Guide

Tips for Using & Operating Your Washing Machine
Model: GGSTLW55B



Top Load Washing Machine

5.5kg Capacity


Getting Started...

Using Your Washing Machine

After loading the laundry and measuring the appropriate detergent, close the machine lid and press the **Power** button. Choose your desired washing cycle by press the **Program** button, select any additional options and press the **Start/Pause** button to begin your cycle.

At the end of the cycle, the washing machine will make an audible tone and automatically turn off. It is recommended when you are done with the machine to turn it off from the power outlet and also close off the water supply for safety reasons.

Operating Your Washing Machine

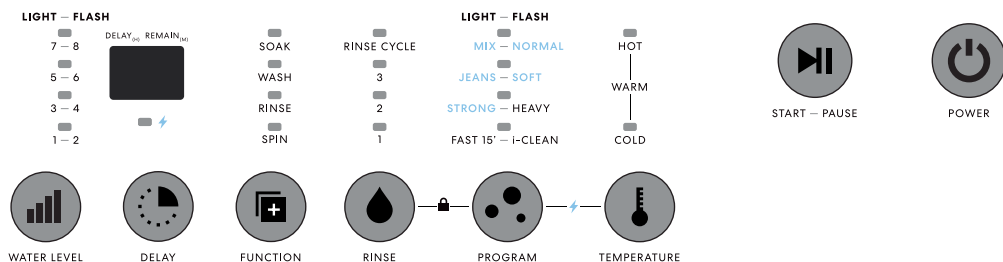

Water Level: Select **Water Level** based on fabric, amount of soiling and your washing habits.

Delay Start: After selecting a **Program**, press the **Delay** to choose a delayed start time. Press **Start/Pause** to commence the delay operation.

Wash Function: Select additional wash functions.

Rinse: Select your desired rinse cycle amounts.

Child Lock: Simultaneously press the **Rinse** and **Program** buttons to activate/deactivate child lock.

Program: Select your wash program. A solid light indicates the modes to the left, a flashing light indicates the modes to the right.

Fast Clean: Press the **Program** and **Temperature** buttons together to activate **Fast Clean** (Available programs for Fast Clean are in blue).

Water Temperature: Select your desired water temperature. When both the **Hot** and **Cold** indicators are lit, it is set to use **Warm** water.

Start/Pause: After selecting your desired wash settings, press this button to start your wash cycle.