 




Television

Reference Guide

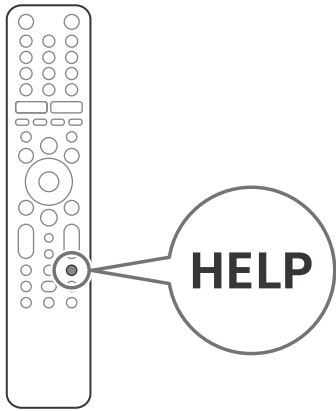

BRAVIA

 
KD-85X8000H / 75X8077H / 75X8050H / 75X8000H / 65X8050H / 65X8000H / KD-55X8050H / 55X8000H / 49X8050H / 49X8000H / 43X8050H / 43X8000H

About Manuals

This TV comes with the following manuals. Please retain the manuals for future reference.

Setup Guide

- TV installation and setup.



Reference Guide (this manual) / Safety Documentation

- Safety information, remote control, troubleshooting, wall-mount installation, specification, etc.



Help Guide (On screen Manual)

- Settings, Android TV functions, Internet connection, troubleshooting, etc.
- To open it, press the **HELP** button on the remote control and select Help Guide.



- You can refer to the Help Guide with your smartphone.



https://rd1.sony.net/help/tv/hga1/h_ga/

IMPORTANT – Read the End User Software Licence Agreement before using your Sony product. Using your product indicates your acceptance of the End User Software Licence Agreement. The software licence agreement between you and Sony is available online at Sony website (<http://www.sony.net/tv-software-licences/>) or on your product screen. Go to [Settings] → [Device Preferences] → [About] → [Legal information] → [Notices and licences].

Note

- Before operating the TV, please read the "Safety Information".
- Read the supplied safety documentation for additional safety information.
- Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
- Images and illustrations used in the Setup Guide and this manual are for reference only and may differ from the actual product.

Location of the identification label

Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

For models with supplied AC adapter: Labels for AC adapter Model No. and Serial No. are located on the bottom of AC adapter.

 
Safety Information

Installation/Set-up


Install and use the TV set in accordance with the instructions below in order to avoid any risk of fire, electric shock or damage and/or injuries.

Installation


- The TV set should be installed near an easily accessible AC power outlet (mains socket).
- Place the TV set on a stable, level surface to prevent it from falling over and causing personal injury or property damage.
- Install the TV where it cannot be pulled, pushed, or knocked over.
- Install the TV so that the TV's Table-Top Stand does not protrude out from the TV stand (not supplied). If the Table-Top Stand protrudes out from the TV stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV.



KD-85X8000H

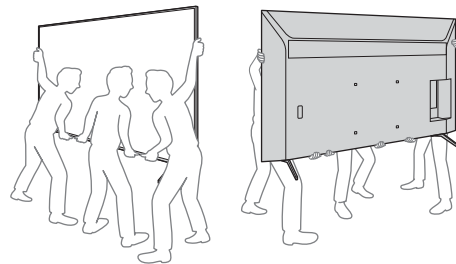 

 KD-75X8077H / 75X8050H / 75X8000H / 65X8050H / 65X8000H / 55X8050H / 55X8000H / 49X8050H / 49X8000H / 43X8050H / 43X8000H

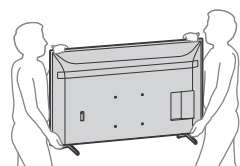

- When transporting the TV set, do not subject it to jolts or excessive vibration.
- When transporting the TV set for repairs or when moving, pack it using the original carton and packing material.

 
Topple prevention

(Models with supplied support belt kit)


Refer to the Setup Guide on top of the cushion. The supplied wood screw is only for affixing to a solid object made of wood.

(Except models with supplied support belt kit)

KD-85X8000H / 75X8077H / 75X8050H / 75X8000H / 65X8050H / 65X8000H / 55X8050H / 55X8000H

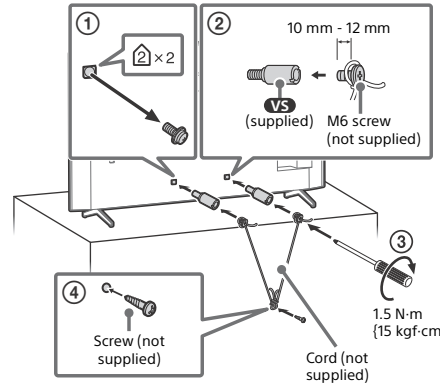

 KD-49X8050H / 49X8000H / 43X8050H / 43X8000H

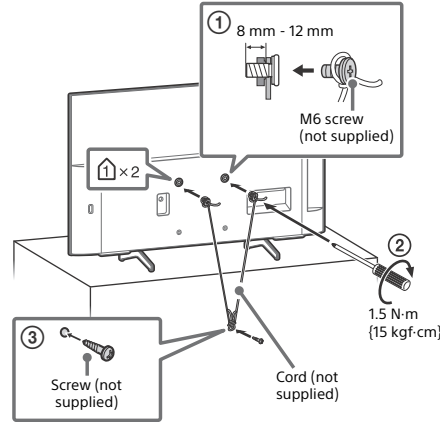

Notice for customer in UAE

 
TRA

REGISTERED No: ER73578/19

DEALER No: DA0105422/13

Remote Control and TV

The remote control shape, location, availability and function of remote control buttons may vary depending on your region/country/TV model.

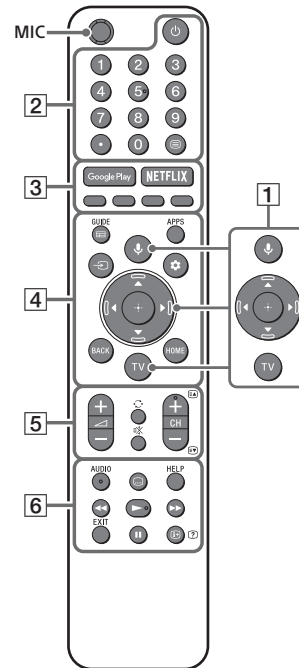

- Microphone:** Use the Google Assistant^{*1,2} or voice search^{*2}. For hints on how to control your TV press **Microphone** button and speak the phrase "voice hints".^{*1}

Navigation: On screen menu navigation and selection.

TV: Display TV channel list or switch to input.

- TV standby**
Number buttons

Dot: (dot)
Text: Display text information.

- Google Play / NETFLIX^{*1,3} / Colour buttons**

- GUIDE/TV box^{*1,4}:** Display the digital programme guide of TV or TV box^{*1,4}.

APPS: Display a list of installed apps.

Input select: Display and select the input source, etc.

Quick settings: Display Quick Settings.

BACK

HOME

- Volume:** **Volume**

Jump: (Jump)

Mute: (Mute)^{*5}

CH +/-: Select the channel, or next (next) / previous (previous) page.

- AUDIO:** Select the sound of multilingual source or dual sound (depend on programme source).

 
Subtitle setting: (Subtitle setting)

HELP: Display the Help menu.

Navigation: (Navigation)

EXIT

Info/Text reveal: Display information.

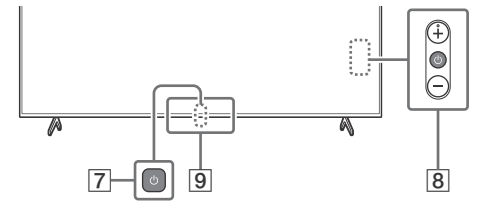


- Power:** (Power) (except KD-49X8050H / 49X8000H / 43X8050H / 43X8000H)

- Power +/-:** (Power) +/- (KD-49X8050H / 49X8000H / 43X8050H / 43X8000H only)

- Remote Control sensor / Light sensor / LED**

 - *1 Only on limited region/country/TV model/language.
- *2 The Google Assistant or voice search requires an Internet connection.
- *3 Installation might be required depending on region/country.
- *4 [TV box setup] setting is required.
- *5 Accessibility shortcut is available by pressing and holding (Mute).



Installing the TV to the Wall

Using the optional Wall-Mount Bracket (SU-WL850 or SU-WL450)* (not supplied)

To Customers:

For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

To Sony Dealers and Contractors:

Provide full attention to safety during the installation, periodic maintenance and examination of this product.

Wall-Mount Bracket Installation Information

This TV's instruction manual only provides the steps to prepare the TV for Wall-Mount installation before it is installed on the wall. For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the product page for your TV model.

<https://www.sony-asia.com/support>

Preparing for Wall-Mount Installation

Make sure to attach the Table-Top Stand before installing the TV to the wall by referring to the Setup Guide (except KD-49X8050H / 49X8000H / 43X8050H / 43X8000H).

- Prepare the TV for the Wall-Mount Bracket before making cable connections.
- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- Be sure to entrust the attachment of this product to the wall to Sony dealers or licensed contractors and pay adequate attention to safety during the installation. Sony is not liable for any damage or injury caused by mishandling or improper installation.
- The screws for Wall-Mount Bracket are not supplied.
- Only qualified service personnel should carry out wall-mount installations.
- For safety reasons, it is strongly recommended that you use Sony accessories, including:
 - Wall-Mount Bracket SU-WL850
 - Wall-Mount Bracket SU-WL450
- Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the Wall-Mount Bracket to the TV set.

The supplied screws are designed as indicated by illustration when measured from the attaching surface of the Wall-Mount Bracket.

The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

 
The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

KD-85X8000H / 75X8077H / 75X8050H / 75X8000H / 65X8050H / 65X8000H / 55X8050H / 55X8000H

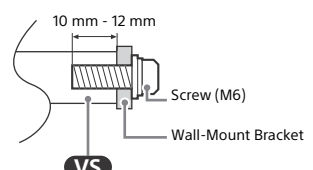

KD-49X8050H / 49X8000H / 43X8050H / 43X8000H

