

**5-013-729-32(1)**

English

Wireless Noise Canceling Stereo Headset

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

Do not subject the batteries to extreme low temperature conditions that may result in overheating and thermal runaway.

Do not dismantle, open or shred secondary cells or batteries.

Do not expose cells or batteries to heat or fire. Avoid storage in direct sunlight.

In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes and do not wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. Always refer to the manufacturer’s instructions or equipment manual for proper charging instructions.

After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Dispose of properly.

This equipment has been tested and found to comply with the limits set in the EMC regulation using a connection cable shorter than 3 meters.

Do not use, store, or leave in a place subject to high amounts of humidity, dust, smoke, or steam, or in a place subject to high temperatures such as near a fire, a location subject to direct sunlight, in a car, etc.

High volume may affect your hearing.

Do not use the unit while walking, driving or cycling. Doing so may cause traffic accidents.

Do not use at a dangerous place unless the surrounding sound can be heard.

The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately and consult your nearest Sony dealer.

When using the unit, be careful in the following cases.

- When using the unit around a sink etc.
- Be careful that the unit does not fall into a sink or container filled with water.
- When using the unit in the rain or snow, or in humid locations
- When using the unit with a bag or case that you are carrying
- If you touch the unit with wet hands, or put the unit in the pocket of a damp article of clothing, the unit may get wet.

For details on the effect of contact to the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

Never insert the USB plug when the main unit or charging cable is wet. If the USB plug is inserted while the main unit or charging cable is wet, short circuit may occur due to the liquid (tap water, seawater, soft drink, etc.) attached to the main unit or charging cable or due to foreign matter, and cause abnormal heat generation or malfunction.

This product (including accessories) has magnet(s) which may interfere with pacemakers, programmable shut valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

**Note on static electricity**

Static electricity accumulated in the body may cause mild tingling in your ears. To reduce the effect, wear clothes made from natural materials, which suppress the generation of static electricity.

Complies with IEC60335 Standards DB0353

https://r1d1.sony.net/help/mdr/wh1000xm4/h\_zz/



# Wireless Noise Canceling Stereo Headset

# Беспроводные стереонаушники с функцией шумоподавления

High volume may affect your hearing.
Do not use the unit while walking, driving or cycling. Doing so may cause traffic accidents.
Do not use at a dangerous place unless the surrounding sound can be heard.

The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately and consult your nearest Sony dealer.
When using the unit, be careful in the following cases.

- When using the unit around a sink etc.
- Be careful that the unit does not fall into a sink or container filled with water.
- When using the unit in the rain or snow, or in humid locations
- When using the unit with a bag or case that you are carrying
- If you touch the unit with wet hands, or put the unit in the pocket of a damp article of clothing, the unit may get wet.

For details on the effect of contact to the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

Never insert the USB plug when the main unit or charging cable is wet. If the USB plug is inserted while the main unit or charging cable is wet, short circuit may occur due to the liquid (tap water, seawater, soft drink, etc.) attached to the main unit or charging cable or due to foreign matter, and cause abnormal heat generation or malfunction.

This product (including accessories) has magnet(s) which may interfere with pacemakers, programmable shut valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

**Note on static electricity**
Static electricity accumulated in the body may cause mild tingling in your ears. To reduce the effect, wear clothes made from natural materials, which suppress the generation of static electricity.

Complies with IEC60335 Standards DB0353

https://r1d1.sony.net/help/mdr/wh1000xm4/h\_zz/

https://www.sony.net/

©2020 Sony Corporation
Printed in Malaysia
https://www.sony.net/

WH-1000XM4

Made for iPhone | iPod

DIGITAL NOISE REDUCTION

Bluetooth®

LDAC™

A

D



Bluetooth and Wi-Fi (IEEE802.11b/g/n) devices use the same frequency (2.4 GHz). When using the unit near a Wi-Fi device, electromagnetic interference may occur, resulting in noise, audio dropout, or the inability to connect. If this happens, try performing the following remedies:

- Establish a connection between the unit and the Bluetooth device when they are at least 10 m away from the Wi-Fi device.
- Turn off the Wi-Fi device when using the unit within 10 m of the Wi-Fi device.
- Position the unit and the Bluetooth device as near as possible to each other.
- Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices. Turn off this unit and other Bluetooth devices in the following locations, as they may cause an accident:
  - in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.
- The audio playback on this unit may be delayed from that on the transmitting device, due to the characteristics of Bluetooth wireless technology. As a result, the sound may not be in sync with the image when viewing movies or playing games.
- This product emits radio waves when used in wireless mode. When used in wireless mode on an airplane, follow flight crew directions regarding permissible use of products in wireless mode.
- The unit supports security functions that comply with the Bluetooth standard as a means of ensuring security during communication using Bluetooth wireless technology. However, depending on the configured settings and other factors, this security may not be sufficient. Be careful when communicating using Bluetooth wireless technology.
- Sony shall assume no responsibility for any anomalies or loss resulting from information leaks that occur when using Bluetooth communications.
- Connection with all Bluetooth devices cannot be guaranteed.
- Bluetooth devices connected with this unit must comply with the Bluetooth standard prescribed by Bluetooth SIG, Inc., and must be certified as compliant.
- Even when a connected device complies with the Bluetooth standard, there may be cases where the characteristics or specifications of the Bluetooth device make it unable to connect, or result in different control methods, display, or operation.
- When using the unit to perform a video call or free talking on the phone, noise may occur depending on the connected device or the communication environment.
- Depending on the device to be connected, it may require some time to start communications.

**When using the unit while walking, driving or cycling.** Doing so may cause traffic accidents.

**Do not use at a dangerous place unless the surrounding sound can be heard.**

The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately and consult your nearest Sony dealer.

When using the unit, be careful in the following cases.

- When using the unit around a sink etc.
- Be careful that the unit does not fall into a sink or container filled with water.
- When using the unit in the rain or snow, or in humid locations
- When using the unit with a bag or case that you are carrying
- If you touch the unit with wet hands, or put the unit in the pocket of a damp article of clothing, the unit may get wet.

For details on the effect of contact to the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

Never insert the USB plug when the main unit or charging cable is wet. If the USB plug is inserted while the main unit or charging cable is wet, short circuit may occur due to the liquid (tap water, seawater, soft drink, etc.) attached to the main unit or charging cable or due to foreign matter, and cause abnormal heat generation or malfunction.

This product (including accessories) has magnet(s) which may interfere with pacemakers, programmable shut valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

**Note on static electricity**
Static electricity accumulated in the body may cause mild tingling in your ears. To reduce the effect, wear clothes made from natural materials, which suppress the generation of static electricity.

Complies with IEC60335 Standards DB0353

https://r1d1.sony.net/help/mdr/wh1000xm4/h\_zz/

https://www.sony.net/

©2020 Sony Corporation
Printed in Malaysia
https://www.sony.net/

WH-1000XM4

Made for iPhone | iPod

DIGITAL NOISE REDUCTION

Bluetooth®

LDAC™

English

Wireless Noise Canceling Stereo Headset

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

Do not subject the batteries to extreme low temperature conditions that may result in overheating and thermal runaway.
Do not dismantle, open or shred secondary cells or batteries.
Do not expose cells or batteries to heat or fire. Avoid storage in direct sunlight.

In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes and do not wash the affected area with copious amounts of water and seek medical advice.
Secondary cells and batteries need to be charged before use. Always refer to the manufacturer’s instructions or equipment manual for proper charging instructions.
After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.
Dispose of properly.
This equipment has been tested and found to comply with the limits set in the EMC regulation using a connection cable shorter than 3 meters.

Do not use, store, or leave in a place subject to high amounts of humidity, dust, smoke, or steam, or in a place subject to high temperatures such as near a fire, a location subject to direct sunlight, in a car, etc.

High volume may affect your hearing.

Do not use the unit while walking, driving or cycling. Doing so may cause traffic accidents.

Do not use at a dangerous place unless the surrounding sound can be heard.

The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately and consult your nearest Sony dealer.
When using the unit, be careful in the following cases.

- When using the unit around a sink etc.
- Be careful that the unit does not fall into a sink or container filled with water.
- When using the unit in the rain or snow, or in humid locations
- When using the unit with a bag or case that you are carrying
- If you touch the unit with wet hands, or put the unit in the pocket of a damp article of clothing, the unit may get wet.

For details on the effect of contact to the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

Never insert the USB plug when the main unit or charging cable is wet. If the USB plug is inserted while the main unit or charging cable is wet, short circuit may occur due to the liquid (tap water, seawater, soft drink, etc.) attached to the main unit or charging cable or due to foreign matter, and cause abnormal heat generation or malfunction.

This product (including accessories) has magnet(s) which may interfere with pacemakers, programmable shut valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

**Note on static electricity**
Static electricity accumulated in the body may cause mild tingling in your ears. To reduce the effect, wear clothes made from natural materials, which suppress the generation of static electricity.

Complies with IEC60335 Standards DB0353

https://r1d1.sony.net/help/mdr/wh1000xm4/h\_zz/

https://www.sony.net/

©2020 Sony Corporation
Printed in Malaysia
https://www.sony.net/

WH-1000XM4

Made for iPhone | iPod

DIGITAL NOISE REDUCTION

Bluetooth®

LDAC™

A

D

TRA

REGISTERED NO.: ER78417/20

DEALER NO.: DAO096946/12

PRECUTIONS

On BLUETOOTH® communications

- Bluetooth wireless technology operates within a range of about 10 m. The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
- Bluetooth communications may not be possible, or noise or audio dropout may occur under the following conditions:
  - When there is a person between the unit and the Bluetooth device.
  - When there are any obstacles between the Bluetooth device so that it faces the antenna of the unit.
  - When there is an obstacle, such as a metal object or a wall, between the unit and the Bluetooth device.
  - When a Wi-Fi device or microwave oven is in use, or microwaves are emitted near the unit.
  - Compared to use indoors, use outdoors is subjected little to signal reflection from walls, floors, and ceilings, which results in audio dropout occurring more frequently than use indoors.
  - The antenna is built into the unit as indicated by the dotted line in the illustration (Fig. 2). The sensitivity of the Bluetooth communications can be improved by avoiding any obstacles between the connected Bluetooth device and the antenna of this unit.
- Bluetooth and Wi-Fi (IEEE802.11b/g/n) devices use the same frequency (2.4 GHz). When using the unit near a Wi-Fi device, electromagnetic interference may occur, resulting in noise, audio dropout, or the inability to connect. If this happens, try performing the following remedies:
  - Establish a connection between the unit and the Bluetooth device when they are at least 10 m away from the Wi-Fi device.
  - Turn off the Wi-Fi device when using the unit within 10 m of the Wi-Fi device.
  - Position the unit and the Bluetooth device as near as possible to each other.
  - Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices. Turn off this unit and other Bluetooth devices in the following locations, as they may cause an accident:
    - in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.
  - The audio playback on this unit may be delayed from that on the transmitting device, due to the characteristics of Bluetooth wireless technology. As a result, the sound may not be in sync with the image when viewing movies or playing games.
  - This product emits radio waves when used in wireless mode. When used in wireless mode on an airplane, follow flight crew directions regarding permissible use of products in wireless mode.
  - The unit supports security functions that comply with the Bluetooth standard as a means of ensuring security during communication using Bluetooth wireless technology. However, depending on the configured settings and other factors, this security may not be sufficient. Be careful when communicating using Bluetooth wireless technology.
  - Sony shall assume no responsibility for any anomalies or loss resulting from information leaks that occur when using Bluetooth communications.
  - Connection with all Bluetooth devices cannot be guaranteed.
  - Bluetooth devices connected with this unit must comply with the Bluetooth standard prescribed by Bluetooth SIG, Inc., and must be certified as compliant.
  - Even when a connected device complies with the Bluetooth standard, there may be cases where the characteristics or specifications of the Bluetooth device make it unable to connect, or result in different control methods, display, or operation.
  - When using the unit to perform a video call or free talking on the phone, noise may occur depending on the connected device or the communication environment.
  - Depending on the device to be connected, it may require some time to start communications.

**When using the unit while walking, driving or cycling.** Doing so may cause traffic accidents.

**Do not use at a dangerous place unless the surrounding sound can be heard.**

The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately and consult your nearest Sony dealer.

When using the unit, be careful in the following cases.

- When using the unit around a sink etc.
- Be careful that the unit does not fall into a sink or container filled with water.
- When using the unit in the rain or snow, or in humid locations
- When using the unit with a bag or case that you are carrying
- If you touch the unit with wet hands, or put the unit in the pocket of a damp article of clothing, the unit may get wet.

For details on the effect of contact to the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

Never insert the USB plug when the main unit or charging cable is wet. If the USB plug is inserted while the main unit or charging cable is wet, short circuit may occur due to the liquid (tap water, seawater, soft drink, etc.) attached to the main unit or charging cable or due to foreign matter, and cause abnormal heat generation or malfunction.

This product (including accessories) has magnet(s) which may interfere with pacemakers, programmable shut valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

**Note on static electricity**
Static electricity accumulated in the body may cause mild tingling in your ears. To reduce the effect, wear clothes made from natural materials, which suppress the generation of static electricity.

Complies with IEC60335 Standards DB0353

https://r1d1.sony.net/help/mdr/wh1000xm4/h\_zz/

https://www.sony.net/

©2020 Sony Corporation
Printed in Malaysia
https://www.sony.net/

WH-1000XM4

Made for iPhone | iPod

DIGITAL NOISE REDUCTION

Bluetooth®

LDAC™

A

D

TRA

REGISTERED NO.: ER78417/20

DEALER NO.: DAO096946/12

PRECUTIONS

On BLUETOOTH® communications

- Bluetooth wireless technology operates within a range of about 10 m. The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
- Bluetooth communications may not be possible, or noise or audio dropout may occur under the following conditions:
  - When there is a person between the unit and the Bluetooth device.
  - When there are any obstacles between the Bluetooth device so that it faces the antenna of the unit.
  - When there is an obstacle, such as a metal object or a wall, between the unit and the Bluetooth device.
  - When a Wi-Fi device or microwave oven is in use, or microwaves are emitted near the unit.
  - Compared to use indoors, use outdoors is subjected little to signal reflection from walls, floors, and ceilings, which results in audio dropout occurring more frequently than use indoors.
  - The antenna is built into the unit as indicated by the dotted line in the illustration (Fig. 2). The sensitivity of the Bluetooth communications can be improved by avoiding any obstacles between the connected Bluetooth device and the antenna of this unit.
- Bluetooth and Wi-Fi (IEEE802.11b/g/n) devices use the same frequency (2.4 GHz). When using the unit near a Wi-Fi device, electromagnetic interference may occur, resulting in noise, audio dropout, or the inability to connect. If this happens, try performing the following remedies:
  - Establish a connection between the unit and the Bluetooth device when they are at least 10 m away from the Wi-Fi device.
  - Turn off the Wi-Fi device when using the unit within 10 m of the Wi-Fi device.
  - Position the unit and the Bluetooth device as near as possible to each other.
  - Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices. Turn off this unit and other Bluetooth devices in the following locations, as they may cause an accident:
    - in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.
  - The audio playback on this unit may be delayed from that on the transmitting device, due to the characteristics of Bluetooth wireless technology. As a result, the sound may not be in sync with the image when viewing movies or playing games.
  - This product emits radio waves when used in wireless mode. When used in wireless mode on an airplane, follow flight crew directions regarding permissible use of products in wireless mode.
  - The unit supports security functions that comply with the Bluetooth standard as a means of ensuring security during communication using Bluetooth wireless technology. However, depending on the configured settings and other factors, this security may not be sufficient. Be careful when communicating using Bluetooth wireless technology.
  - Sony shall assume no responsibility for any anomalies or loss resulting from information leaks that occur when using Bluetooth communications.
  - Connection with all Bluetooth devices cannot be guaranteed.
  - Bluetooth devices connected with this unit must comply with the Bluetooth standard prescribed by Bluetooth SIG, Inc., and must be certified as compliant.
  - Even when a connected device complies with the Bluetooth standard, there may be cases where the characteristics or specifications of the Bluetooth device make it unable to connect, or result in different control methods, display, or operation.
  - When using the unit to perform a video call or free talking on the phone, noise may occur depending on the connected device or the communication environment.
  - Depending on the device to be connected, it may require some time to start communications.

**When using the unit while walking, driving or cycling.** Doing so may cause traffic accidents.

**Do not use at a dangerous place unless the surrounding sound can be heard.**

The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately and consult your nearest Sony dealer.

When using the unit, be careful in the following cases.

- When using the unit around a sink etc.
- Be careful that the unit does not fall into a sink or container filled with water.
- When using the unit in the rain or snow, or in humid locations
- When using the unit with a bag or case that you are carrying
- If you touch the unit with wet hands, or put the unit in the pocket of a damp article of clothing, the unit may get wet.

For details on the effect of contact to the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

Never insert the USB plug when the main unit or charging cable is wet. If the USB plug is inserted while the main unit or charging cable is wet, short circuit may occur due to the liquid (tap water, seawater, soft drink, etc.) attached to the main unit or charging cable or due to foreign matter, and cause abnormal heat generation or malfunction.

This product (including accessories) has magnet(s) which may interfere with pacemakers, programmable shut valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

**Note on static electricity**
Static electricity accumulated in the body may cause mild tingling in your ears. To reduce the effect, wear clothes made from natural materials, which suppress the generation of static electricity.

Complies with IEC60335 Standards DB0353

https://r1d1.sony.net/help/mdr/wh1000xm4/h\_zz/

https://www.sony.net/

©2020 Sony Corporation
Printed in Malaysia
https://www.sony.net/

WH-1000XM4

Made for iPhone | iPod

DIGITAL NOISE REDUCTION

Bluetooth®

LDAC™

A

D

TRA

REGISTERED NO.: ER78417/20

DEALER NO.: DAO096946/12

PRECUTIONS

On BLUETOOTH® communications

- Bluetooth wireless technology operates within a range of about 10 m. The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
- Bluetooth communications may not be possible, or noise or audio dropout may occur under the following conditions:
  - When there is a person between the unit and the Bluetooth device.
  - When there are any obstacles between the Bluetooth device so that it faces the antenna of the unit.
  - When there is an obstacle, such as a metal object or a wall, between the unit and the Bluetooth device.
  - When a Wi-Fi device or microwave oven is in use, or microwaves are emitted near the unit.
  - Compared to use indoors, use outdoors is subjected little to signal reflection from walls, floors, and ceilings, which results in audio dropout occurring more frequently than use indoors.
  - The antenna is built into the unit as indicated by the dotted line in the illustration (Fig. 2). The sensitivity of the Bluetooth communications can be improved by avoiding any obstacles between the connected Bluetooth device and the antenna of this unit.
- Bluetooth and Wi-Fi (IEEE802.11b/g/n) devices use the same frequency (2.4 GHz). When using the unit near a Wi-Fi device, electromagnetic interference may occur, resulting in noise, audio dropout, or the inability to connect. If this happens, try performing the following remedies:
  - Establish a connection between the unit and the Bluetooth device when they are at least 10 m away from the Wi-Fi device.
  - Turn off the Wi-Fi device when using the unit within 10 m of the Wi-Fi device.
  - Position the unit and the Bluetooth device as near as possible to each other.
  - Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices. Turn off this unit and other Bluetooth devices in the following locations, as they may cause an accident:
    - in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.
  - The audio playback on this unit may be delayed from that on the transmitting device, due to the characteristics of Bluetooth wireless technology. As a result, the sound may not be in sync with the image when viewing movies or playing games.
  - This product emits radio waves when used in wireless mode. When used in wireless mode on an airplane, follow flight crew directions regarding permissible use of products in wireless mode.
  - The unit supports security functions that comply with the Bluetooth standard as a means of ensuring security during communication using Bluetooth wireless technology. However, depending on the configured settings and other factors, this security may not be sufficient. Be careful when communicating using Bluetooth wireless technology.
  - Sony shall assume no responsibility for any anomalies or loss resulting from information leaks that occur when using Bluetooth communications.
  - Connection with all Bluetooth devices cannot be guaranteed.
  - Bluetooth devices connected with this unit must comply with the Bluetooth standard prescribed by Bluetooth SIG, Inc., and must be certified as compliant.
  - Even when a connected device complies with the Bluetooth standard, there may be cases where the characteristics or specifications of the Bluetooth device make it unable to connect, or result in different control methods, display, or operation.
  - When using the unit to perform a video call or free talking on the phone, noise may occur depending on the connected device or the communication environment.
  - Depending on the device to be connected, it may require some time to start communications.

**When using the unit while walking, driving or cycling.** Doing so may cause traffic accidents.

**Do not use at a dangerous place unless the surrounding sound can be heard.**

The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately and consult your nearest Sony dealer.

When using the unit, be careful in the following cases.

- When using the unit around a sink etc.
- Be careful that the unit does not fall into a sink or container filled with water.
- When using the unit in the rain or snow, or in humid locations
- When using the unit with a bag or case that you are carrying
- If you touch the unit with wet hands, or put the unit in the pocket of a damp article of clothing, the unit may get wet.

For details on the effect of contact to the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

Never insert the USB plug when the main unit or charging cable is wet. If the USB plug is inserted while the main unit or charging cable is wet, short circuit may occur due to the liquid (tap water, seawater, soft drink, etc.) attached to the main unit or charging cable or due to foreign matter, and cause abnormal heat generation or malfunction.

This product (including accessories) has magnet(s) which may interfere with pacemakers, programmable shut valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

**Note on static electricity**
Static electricity accumulated in the body may cause mild tingling in your ears. To reduce the effect, wear clothes made from natural materials, which suppress the generation of static electricity.

Complies with IEC60335 Standards DB0353

https://r1d1.sony.net/help/mdr/wh1000xm4/h\_zz/

https://www.sony.net/

©2020 Sony Corporation
Printed in Malaysia
https://www.sony.net/

WH-1000XM4

Made for iPhone | iPod

DIGITAL NOISE REDUCTION

Bluetooth®

