

SIMPLE MANUAL

Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

SN7Y



www.lg.com Copyright © 2020 LG Electronics Inc. All Rights Reserved.



CAUTION RISK OF ELECTRIC SHOCK



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock

The exclamation point within an

user to the presence of important

equilateral triangle is intended to alert the



MOISTURE.

operating and maintenance (servicing)

structions in the literature accompanying WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

CAUTION: Only use the AC adapter supplied with this device. Do not use a power supply from another device or another manufacturer. Using any other power cable or power supply may cause damage to the device and void

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
- If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing (of water or any form of liquid) or ingress of moisture.

For models using a battery

This device is equipped with a portable battery or accumulator.

Risk of fire or explosion if the battery is replaced by an incorrect type.



RF Radiation Exposure Statement

This equipment shall be installed and used at a minimum distance of 20 cm from the human body.

Symbols

~	Refers to alternating current (AC).
===	Refers to direct current (DC).
	Refers to class II equipment.
Ф	Refers to stand-by.
I	Refers to "ON" (power).
4	Refers to dangerous voltage.






SN7Y.DAUSLLK_SIM (Sheet)_ENG_MFL71672211.indd 1-4 2020-03-26 12:47:52



Front Panel



 Rear Panel



DC IN-----· · Connect to the AC adapter. **OPTICAL IN**Connect to an optical device. ·····Connect to a USB device. ······Connect to device with HDMI OUT. HDMI OUT (TV ARC) Connect to a TV.

- It is recommended that you purchase a USB gender separately for the convenience of USB insertion and extraction. (Recommended USB gender type: USB 2.0 extension cable)
- Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

 
- 1 Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
- 2 Turn on the sound bar.
- The sound bar and wireless subwoofer will be automatically connected. The subwoofer's green LED turns on.

Manual Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.

- 1 Press PAIRING on the rear of the wireless subwoofer
- The green LED on the rear of the wireless subwoofer blinks quickly. (If the green LED does not blink, press and hold the **PAIRING**.)
- 2 Turn on the sound bar.
- Pairing is completed. The green LED on the rear of the wireless subwoofer turns on.

Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.




TV Connection

Connect the sound bar and TV using Optical (A) or HDMI ARC (B).


Optical Connection

 - 1 Connect the sound bar to the TV using Optical
- 2 Set up [External Speaker (Optical)] on your TV setting menu.



B HDMI (ARC) Connection

 
- 1 Connect the sound bar to the TV using HDMI
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.



- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal has a higher priority.


Additional Device Connection

1 Connect to the external device like as follow.

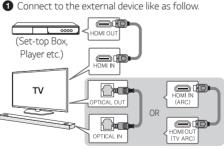

2 Set the input source by pressing F repeatedly.

 Remote control



KM/DDI: Skip/Search

SOUND A

ITH V REPEAT

the **Bluetooth** function by pressing **F** repeatedly. Long press **NI** and press it again to limit Bluetooth connection to only BT and LG TV.

- TV remote: Long press SOUND EFFECT and

press it again to use TV remote control.

FOLDER ^/∨: Searches a folder.

Auto Power ON/OFF: Long press (i) and press

Surround sound: Long press # and press it

REPEAT: Listens to your files repeatedly or randomly.

Additional Information

Refer to the main label.

Model: DA-50F25

Input: 100 - 240 V ~

• Output: 25 V === 2 A

890.0 mm x 65.0 mm x

119.0 mm With foot

5 V === 500 mA

380 W RMS

Design and specifications are subject to change

Devices Inc.

50 - 60 Hz

Manufacturer : Asian Power

Specification

consumption

AC adapter

Dimensions

 $(W \times H \times D)$

Bus Power

Supply

(USB)

Amplifier

Output

power)

(Total RMS

without notice.

Replacement of Battery

I: Play/Pause

Bluetooth connection lock (BT LOCK): Select

SOUND EFFECT: Selects a sound effect mode.

(i): Displays the information of a file, an input source or connected Bluetooth device name.

‡†‡: Adjusts sound level of each speaker.

Rear Speakers Ready

Ready for surround sound with Rear Speakers Kit sold separately. (SPK8-S)

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lge.com. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

available for download.

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.







SN7Y.DAUSLLK SIM (Sheet) ENG MFL71672211.indd 5-8 2020-03-26 12:47:54