

the Diamond Wave

Instruction Book - LMO525



Breville®



Contents

- 2 Breville Recommends Safety First
- 14 Components
- 16 Functions
- 23 Tips
- 24 Care & Cleaning
- 25 Troubleshooting

BREVILLE RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operation and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the Breville Microwave for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover that is fitted to the power plug of the Breville Microwave.
- Do not place the microwave oven near the edge of a bench or table during operation. Ensure all surfaces are level, clean and free of water or any other substances.

- Do not place the microwave oven on or near a hot gas or electric burner, or where it could touch a heated microwave oven.
- When using the microwave oven, provide adequate air space above and on all sides for air circulation (see page 16 Installation).
- Always operate the microwave oven on a heat-resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- Do not use the microwave oven on a metal surface, for example a sink drain board.
- Always ensure the microwave oven is properly assembled before connecting to the power outlet and operating.
- The microwave oven is not intended to be operated by means of an external timer or separate remote control system.
- Never use the microwave oven without food or water in the microwave oven cavity. Operating the microwave oven when empty could cause damage to the appliance.
- Do not leave the microwave oven unattended when in use.
- Do not touch hot surfaces. Allow the microwave oven to cool before moving or cleaning any parts.
- Do not place or store anything on top of the microwave oven.
- Always ensure the microwave oven is turned off at the power outlet and the cord is unplugged from the power outlet before attempting to move the appliance, when not in use, if left unattended and before disassembling, cleaning or storing.

- Keep the appliance clean. Follow the cleaning instructions provided in this book (page 24).
- Always turn the microwave oven off by pressing the STOP/CLEAR button, switch off at the power outlet and unplug at the power outlet when it is not in use.
- Before cleaning, always press the STOP/CLEAR button, switch off at the power outlet and unplug at the power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Before use always check with your doctor if you have a pacemaker. Modern pacemakers are protected against interference, but some older ones may be adversely affected when in close proximity to a microwave oven.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.

- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville service centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville service centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.

- Do not place this appliance on or near a heat source, such as hot plate, microwave oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or stream sensitive materials and provide adequate space above and on all sides for air circulation.

WARNING

- Surfaces may be hot during and after use.

WARNING

- Do not attempt to operate the microwave oven with the door open since the open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks

WARNING

- Do not place any object between the microwave oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

WARNING

- Do not put any foreign material between the door and door jam of the microwave oven as this could cause excessive leakage of microwave energy.

WARNING

- If the door or door seals are damaged, the microwave oven must not be operated until it has been repaired by a Breville Service Centre. It is particularly important that the oven door closes properly and that there is no damage to the :
 - (1) Door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces

WARNING

- It is hazardous for anyone other than a Breville Service Centre to carry out any service or repair operation that involves the removal of the cover which gives protection against exposure to microwave energy.

WARNING

- Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING

- Only allow children to use the microwave oven without supervision when adequate instructions have been given so that the child is able to use the microwave oven in a safe way and understands the hazards of improper use.

WARNING

- When heating food in microwave-safe or paper containers, keep an eye on the microwave oven due to the possibility of ignition.

The appliance should not be cleaned with a steam cleaner.

Microwave Oven specifications

Specification	LMO525
Power consumption	1450W
Output	900W
Outside dimensions (mm)	Approx. (W) 500 x (D) 380 x (H) 300
Oven Cavity dimension (mm)	Approx. (W) 325 x (D) 350 x (H) 200
Oven Capacity	23L
Net Weight approx (kg)	Approx. 13.76kg

SPECIAL SAFETY INSTRUCTIONS FOR YOUR MICROWAVE OVEN

- Wipe the microwave oven cavity with a soft, damp cloth after each use. Leaving food residue, grease or fat in the cavity could cause the microwave oven cavity to overheat and may cause the microwave oven to smoke or catch fire.
- The microwave oven should be cleaned regularly and any food splattering inside the cavity should be removed. Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface, adversely affecting the life of the microwave oven and possibly resulting in a hazardous situation.
- If the door seals or any of the microwave oven is damaged, the microwave oven must not be operated until it has been inspected and/or repaired at an authorised Breville service centre.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Ensure all food containers and/or plates are suitable for use in the microwave oven. This should be done prior to preparing food for heating or cooking in the microwave oven. Monitor foods and liquids heating or cooking in the microwave oven at all times due to the possibility of containers igniting.

- Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- Some containers and/or plates may appear suitable for use in the microwave oven but may be coated in a glaze that will absorb the microwave energy, overheat and cause the container to crack. The glaze may also prevent the food from heating/cooking.
- Food and/or liquids should not be heated or cooked directly on the flatbed base plate. Food and/or liquids must be placed into a suitable microwave proof container before placing onto the flatbed base plate
- Food and/or liquids should not be heated or cooked in plastic or paper containers or bags, unless specified as suitable for use by the manufacturer, due to the possibility of containers exploding or igniting.
- Metal clips or twist ties should be removed from the packaging as these could cause sparking and/or fire.
- Do not use recycled paper or kitchen paper towelling when cooking. Recycled paper may contain small metal or other impurities which could cause sparking and/or fire.
- Do not use metal containers or utensils in the microwave oven as these could cause sparking and/or fire.
- Only use utensils that are suitable for use in microwave ovens.
- Food grade foil should not be used in the microwave oven as this could cause sparking and/or fire.
- Ensure that lids and caps covering containers are removed prior to placing liquids and/or foods into the microwave oven.

- Feeding bottles and baby food jars should have lids and caps removed before warming or heating in the microwave oven. To avoid burns or scalding after heating, the contents should be stirred or shaken and the temperature checked before serving.
- Always ensure the temperature of food or drink which has been heated or cooked in the microwave oven has been tested before eating, drinking or serving to others, especially children, disabled or elderly people.
- The heating of liquids and beverages in the microwave oven can result in delayed eruptive boiling. Care must be taken when handling any containers containing hot liquids or beverages.
- Do not heat popcorn in the microwave oven unless it has been commercially packaged for microwave use. There may be a number of un-popped kernels that may overcook and burn when popping popcorn. Do not use oil unless recommended by the manufacturer. Do not pop popcorn longer than the manufacturer's instructions (popping time should not exceed 3 minutes). Longer cooking could cause scorching or fire.
- Do not cook any food surrounded by a membrane (such as potatoes, chicken liver, egg yolks, oysters, etc) without first piercing the membrane several times with a fork or similar utensils.

- Fresh eggs in the shell and whole hard-boiled eggs should not be cooked or heated in the microwave oven as they may explode during cooking, at the end of cooking or after removing from the microwave oven.
- Do not heat oil or fat for shallow or deep frying in the microwave oven. Doing so may cause the microwave oven and/or the oil to overheat and/or ignite.
- If any smoke is observed, switch off and unplug the microwave oven at the power outlet. Keep the door closed to stifle any flames.
- Do not attempt to operate the microwave oven by any method other than those described in this instruction book. Do not disconnect the microwave oven from the power supply by pulling on the cord to unplug from the power outlet.
- When storing the microwave oven loosely wind the cord. Do not wrap the cord around the microwave oven.
- Only use the temperature probe recommended or supplied together with this microwave oven. This is only applicable if the appliance has the facility to use a temperature sensing probe.

WARNING

- Do not attempt to operate the microwave oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks. Do not place any object between the microwave oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces. Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING

- If the door or door seals are damaged, the microwave oven must not be operated until it has been repaired by a Breville service centre. It is particularly important that the microwave oven door closes properly and that there is no damage to the:
(1) Door (bent), (2) Hinges and latches (broken or loosened),
(3) Door seals and sealing surfaces.

Do not put any foreign material between the door and door jam of the microwave oven as this could cause excessive leakage of microwave energy. It is hazardous for anyone other than a Breville service centre to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

Only allow children to use the microwave oven without supervision when adequate instructions have been given so that the child is able to use the microwave oven in a safe way and understands the hazards of improper use. When the appliance is operated in the combination mode, children should only use the microwave oven under adult supervision due to the temperature generated.




CAUTION

- Surfaces may be hot during and after use. If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the life span of the product and lead to a dangerous situation.

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS




Components

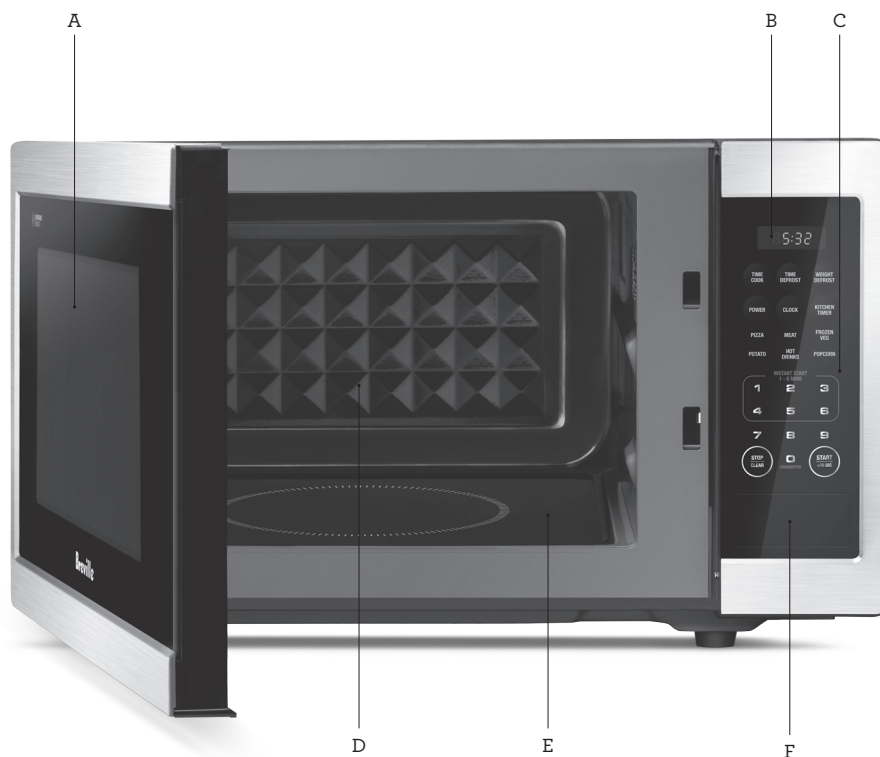

- A. Viewing window
- B. LED display
Shows time, cooking progress and pre-set functions.
- C. Control panel
Numeric keypad and cooking functions.

- D. Diamond Wave cavity
- E. Flatbed base plate
- F. Push button door release

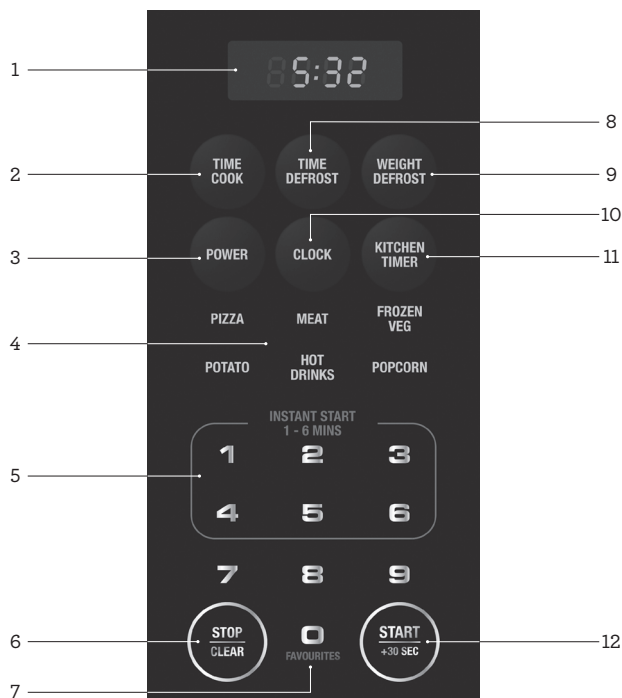

1. **LED digital display screen;**
Displays selected cooking time, cooking function, power and time-of-day.
2. **TIME COOK**
Press to input cooking time.
3. **POWER**
Press to set power level from 1-10 (10-100%).
4. **AUTO MENU**
Automatically sets the cooking time for selected foods and weight.
5. **INSTANT START**
Adds 1-6 minutes at 100% power without the need to press start.
6. **Number pad (0-9)**
Use number pad to set clock time, cooking time or weight.
7. **STOP/CLEAR**
Press to cancel the selected power level, cook or defrost times that were previously programmed.
8. **FAVOURITES**
Allows up to 3 frequently used microwave power levels and cook times to be stored in the microwave for everyday use.
9. **TIME DEFROST**
Use to defrost frozen food by time. The defrosting power level is automatically set once the defrosting time is inputted.
10. **WEIGHT DEFROST**
Use to defrost frozen meat, poultry and seafood by weight. The defrosting time and power level are automatically set once the food category and the weight are programmed.
11. **CLOCK**
Press to set current time.
12. **KITCHEN TIMER**
Press to set countdown timer.
13. **START/+30SEC button;**
Activates all cooking or defrosting functions, as well as adding 30 seconds to cooking time, or programming cooking time by 30 second increments. Each additional press of the button will add 30 seconds to the cooking time.



Functions

BEFORE FIRST USE

Before first use remove all promotional stickers and packaging material before using the microwave oven for the first time.

To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this microwave oven. Carefully unpack the microwave oven and keep all the packing material until all the parts of the microwave oven have been found and the appliance has been assembled. It is recommended to keep all the packing material in a safe place in case you wish to repack the product for shipping purposes. To remove any dust that may have accumulated during packing. Wipe the interior and exterior of the microwave oven with a soft, damp cloth then dry thoroughly.




WARNING

Do not immerse any part of your microwave oven in water or any other liquid

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.
2. A minimum clearance of 20cm on each side and 30cm above the microwave is required between the microwave oven and any adjacent walls. One side must be open.
 - Do not remove the legs from the bottom of the microwave oven.
3. Blocking the intake and/or outlet openings can damage the microwave oven.
4. Place the microwave oven as far away from radios and televisions as possible.
5. Operation of microwave oven may cause interference to your radio or television reception.

6. The microwave must not be placed in a cabinet.

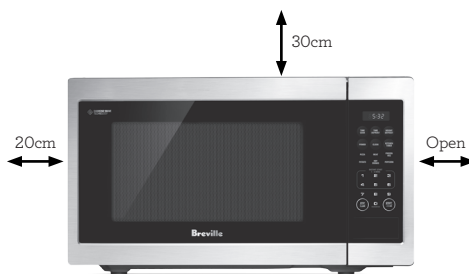

TURNING ON THE MICROWAVE OVEN

1. Plug the power cord into a 230V or 240V power outlet. Switch on at the power outlet. The microwave oven is now on.



WARNING

Do not install the microwave oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the microwave oven could be damaged and the warranty would be void. Check the microwave oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the microwave oven and contact a Breville service centre.

Do not immerse the microwave oven, power cord or plug in water or any other liquid.

INTRODUCTION TO MICROWAVE COOKING

- Microwaves are invisible waves of electromagnetic energy similar to radio waves. Instead of being converted to sound as in a radio or mobile phones, it is converted into a heat source which heats food from the inside.
- Microwaves cook because food molecules of water, fat and sugar react to the energy provided by the microwaves. That energy is absorbed by the food causing the molecules to vibrate quickly. This movement creates friction which causes the food to heat up and therefore cook.
- The energy in a microwave is distributed evenly throughout the cavity.
- Microwave cooking is considered the 'cool' cooking method as only the food gets hot and surrounding air stays cool.
- Microwaves are safe and can be economical.
- Microwave ovens don't need preheating therefore the kitchen stays cooler. Cooking is cleaner with less odours and washing up is reduced.
- Microwave ovens cook foods rapidly. Some foods are better cooked in a microwave oven as they retain more flavour, texture and goodness, such as plain fish fillets, soft fruit, vegetables and fat free cakes.
- In a microwave the heat is produced **INSIDE** the food. In all other conventional cooking methods, heat is applied from **OUTSIDE** through transference of heat by convection or radiation.
- Microwave energy penetrates the food to a depth of about 25mm. Small foods under 5cm in diameter such as eggs are penetrated to the centre from all sides. In larger foods, energy creates heat in the outer layer; this then moves to the centre by conduction, as it does with conventional cooking.

SETTING THE CLOCK

When power is activated, the LED will display 00:00. The input time should be within 1:00-12:59.

Example: To set 12:12.



1. Press the **CLOCK** button, the hour figures will flash.
2. Press the number buttons of 1, 2, 1, 2 in order.



Press **CLOCK** to finish clock setting. ':' will flash, and the time will illuminate.



NOTE

The microwave oven features a 12 hour clock. To set, a valid time between 1:00 and 12:59 must be entered. In the process of clock setting, if **STOP/ CLEAR** is pressed or if there is no operation within 1 minute, the microwave oven will go back to the previous status automatically.

MICROWAVE COOKING

1. Press the TIME COOK button once, the LED screen will display 00:00.



2. Using the number pad, input the cooking time, with the maximum cooking time being 99 minutes and 99 seconds.
3. The default power setting is 100%. To adjust, press the POWER LEVEL button once; the LED screen will display PL10. Use the number pad to adjust the power level as required (see Power Level Table on same page).
4. Press START/+30 SEC, to commence operation.
Example: Microwave with 50% power for 15 minutes.

1. Press the TIME COOK button once; 00:00 is displayed on the LED Screen.
2. Press 1, 5, 0, 0 in that order.



3. Press the POWER LEVEL button once, then press 5 to select 50% microwave power PL5.
4. Press the START/+30 SEC button to commence operation.



NOTE

During microwave cooking, POWER LEVEL can be pressed to change the power level. After pressing POWER LEVEL, the current power level will light for 3 seconds, now you can select the new power level by pressing the relevant number. The microwave oven will work with the selected power for the remaining cooking time.

POWER LEVEL	MICROWAVE POWER	DISPLAY
10	100%	PL10
9	90%	PL9
8	80%	PL8
7	70%	PL7
6	60%	PL6
5	50%	PL5
4	40%	PL4
3	30%	PL3
2	20%	PL2
1	10%	PL1
0	0%	PL0

KITCHEN TIMER

1. Press the KITCHEN TIMER button; the LED Screen will display 00:00 flashing.



2. Using the number pad, enter the required countdown time (the maximum time is 99 minutes and 99 seconds).
3. Press the START/+30 SEC button to confirm the time and commence the countdown.
4. When the timer has counted down to 0, it will beep 5 times. The LED Screen will revert back to standby.



NOTE

The Kitchen Timer is only a countdown mechanism; the microwave will not cook on this setting. Press STOP/CANCEL to cancel the kitchen timer function.

INSTANT START

When the unit is in waiting state, press START/+30 SEC to start cooking at 30 seconds with 100% microwave power. Each additional press will increase the cooking time by 30 seconds. The maximum cooking time is 99 minutes and 99 seconds.

Press START/+30 SEC once to start cooking, LED will display 0:30.

Press START/+30 SEC again for 5 times, and the cooking time will be 3 minutes.

There are additional instant start buttons which are activated by pressing numbers 1 to 6.

NUMBER	MICROWAVE POWER	DURATION
1	100%	1 minute
2	100%	2 minutes
3	100%	3 minutes
4	100%	4 minutes
5	100%	5 minutes
6	100%	6 minutes



NOTE

During microwave time cook and time defrost, time can be added by pressing START/30 SEC button. Always cook defrosted foods immediately after thawing.

TIPS ON DEFROSTING

- The energy required for defrosting is much less than for cooking as the microwave causes the ice formed in the food to melt rather than heat.
- Before defrosting meat in the microwave oven, remove the freezer bag or wrapping to prevent meat sitting in 'drip', which will otherwise boil as the meat defrosts causing meat to go grey and begin to stew. To remove frozen meat from freezer wrappings, defrost for a few minutes so the wrap is easy to remove.
- Remove meat from Styrofoam tray as they are not microwave-safe.

- Place meat onto a microwave safe rack and a drip tray to catch juices.
- Check the meat throughout the defrosting time. As outer portions of meat thaw, remove them. If the edges of meat feel warm, stop microwaving and allow meat to stand for a few minutes or until edges are cold again.
- After defrosting the meat, it must be cooked right away. Don't leave it to stand for any length of time at room temperature or in the fridge.

WEIGHT DEFROST

Example: Defrost beef of 500g:

1. Press WEIGHT DEFROST; LED will display dEF1.
2. Press 5, 0, 0 in order, the range of defrosting weight is 100g-2000g. Press START/+30 SEC to start defrosting, time will be displayed and countdown will start.



TIME DEFROST

1. Press the TIME DEFROST button, the LED Screen will display dEF2.



2. Using the number pad, input the defrosting time. The effective time range is 00:01-99:99
3. The default microwave power is power level 3 PL3. To change the power level, press POWER once, and the LED screen will display PL3, then use the number pad to select the power level required.
4. Press the START/+30 SEC button to start defrosting. The remaining cooking time will be displayed.

AUTO MENUS

Pizza Auto Menu

1. Press the PIZZA button repeatedly until the approximate weight of the pizza to be reheated appears on the LED screen. 200, 400 grams will be displayed in that order. For example, press the PIZZA button once 200 will be displayed.
2. Place pizza slices on a microwave-safe plate and place inside of microwave oven.
3. Press the START/+30 SEC button to commence reheating; the microwave oven will beep once. When reheating has finished, the microwave oven will beep five times and then the LED screen will revert back to standby.

Meat

1. Press the MEAT button repeatedly until the approximate weight of the food to be re-heated appears on the LED screen. 250, 350, 450 grams will display in that order. For example, press the MEAT button once, 250 will be displayed.
2. Cover plate with vented cling wrap or a microwave-safe vented lid and place inside the microwave oven.
3. Press the START/+30 SEC button to commence cooking; the microwave will beep once. When heating is finished, the microwave oven will beep five times and the LED screen will revert back to standby.

Frozen Vegetable Auto Menu

1. Cook in a microwave-safe container partially covered with cling wrap or microwave-safe vented lid.
2. Press the FROZEN VEG button repeatedly until the weight of the frozen vegetables to be cooked appears on the LED screen. 200, 300, 400 grams will be displayed in that order. For example, to programme 200g press the FROZEN VEG button once, 200 will be displayed.

3. Press the START/+30 SEC button to commence operation; the microwave oven will beep once. When cooking is finished, the microwave oven will beep five times and the LED screen will revert back to standby.

Potato Auto Menu

1. Before cooking, prick each potato 3–4 times with a fork and position potatoes around the flatbed base plate.
2. Press the POTATO button repeatedly until the weight of the potato to be cooked appears on the LED screen. 200, 400, 600 grams will be displayed in that order. For example, to programme 200g press the POTATO button once, 200 will be displayed.
 - 1 : 1 potato (approximately 200 grams)
 - 2 : 2 potatoes (approximately 400 grams)
 - 3 : 3 potatoes (approximately 600 grams)Press the START/+30 SEC button to commence operation; the microwave oven will beep once. When cooking is complete, microwave oven will beep five times and the LED screen will revert back to standby.

Hot drink Auto Menu

1. Use microwave-safe cups to reheat drinks. For even heating, always space cups evenly around the inside of the flatbed base plate.
2. Press the HOT DRINKS button repeatedly until the number of cups to be heated appears on the LED screen. 1, 2, 3 (representing cups) will be displayed in that order. One cup is approximately 120ml. For example, press the HOT DRINKS button once, 1 will be displayed.
3. Press the START/+30 SEC button to commence operation; the microwave oven will beep once. When cooking is finished, microwave oven will beep five times and the LED screen will revert back to standby.



NOTE

If warming more than 1 cup at a time, arrange cups evenly spaced around the inside of the flatbed base plate.

Popcorn Auto Menu

1. Follow instructions for pack positioning and general cooking tips.
2. Press the POPCORN button repeatedly until the approximate weight you wish to cook appears on the LED screen. 50, 85, 100 grams will be displayed in that order. For example, press POPCORN once, 50 will be displayed.
3. Press the START/+30 SEC button to commence operation; the microwave oven will beep once. When cooking is finished, microwave oven will beep five times and the LED Screen will revert back to standby.

MICROWAVE OVEN MENU GUIDE

POWER LEVEL	WEIGHT (g)	PRESS	DISPLAY
Pizza	200	1 time	200
	400	2 times	400
Meat	250	1 time	250
	350	2 times	350
	450	3 times	450
Frozen Vegetables	200	1 time	200
	300	2 times	300
	400	3 times	400
Potato	200	1 time	200
	400	2 times	400
	600	3 times	600
Hot Drink	1	1 time	1
	2	2 times	2
	3	3 times	3
Popcorn	50	1 time	1
	85	2 times	2
	100	3 times	3

TIPS ON AUTO MENU SETTINGS

Vegetables

- When cooking vegetables, wash first and shake lightly, leaving some water clinging to them. Place into microwave-safe bowl and cook with a vented cover on.

Meat

- Place meat on a microwave-safe rack which sits inside a shallow dish or on a rack which contains its own run off rim around the edge. Cook fat side up first and turn over halfway through cooking. If cooking mince or diced meat, place into a microwave-safe round casserole dish and stir halfway through cooking.

Potatoes

- Prick each potato 3–4 times with a fork and arrange around the centre of the flatbed base plate.

FAVOURITES SETTINGS

1. Press the 0/FAVOURITES button twice, stop when the LED screen displays 2.
2. Press the TIME COOK button once, then press 3,2,0 in order to set the cooking time 3 minutes 20 seconds.
3. Press the POWER LEVEL button once. PL10 will be displayed on the LED Screen, then press the 8 button, PL8 will now be displayed on the LED Screen.
4. Press the START/+30 SEC button to save the setting.
 2. The microwave oven will beep once and will display 2. The setting has now been saved as Favourite 2.
5. Up to 3 settings can be stored in the microwave oven Favourites setting. Repeat the above steps to store desired settings in each Favourites allocation.



NOTE

Once the main power is switched off, stored memories will be deleted.

TO RECALL THE FAVOURITES SETTINGS

In order to recall the saved cooking programme, press the 0/FAVOURITES button twice - the LED screen will display 2 -then press the START/+30 SEC button to commence operation.

CHILD LOCK FUNCTION

1. To activate the child-lock, press and hold the STOP/CLEAR button for 3 seconds. There will be a long 'beep' denoting that the microwave is entering into the child-lock state and the LED screen will display:



2. To de-activate the child-lock, in the locked state, press and hold the STOP/CLEAR button for 3 seconds, there will be a long 'beep' denoting that the lock is released.



Tips

SOME IMPORTANT TIPS FOR MICROWAVING COOKING

To help equalize energy in the food so that it cooks evenly follow these helpful tips.

1. Arrange foods with varying size ends, such as chicken drumsticks and broccoli with the thicker or tougher part positioned to the outside of the dish. This ensures the parts that require more cooking will receive more energy, so the food will cook evenly.
2. Covering the dish during cooking holds in the heat and steam to speed up the cooking time. Use a microwave-safe lid or plastic wrap that has been vented by turning back one edge at the side of the dish to form a narrow vent to release excess steam.
3. Choose cooking dishes that are shallow and preferably have straight sides. Shallow dishes enable the food to cook faster and straight edges prevent the edges from being overcooked.
4. Use round shaped microwave dishes. Round shapes cook more evenly than square or rectangular dishes which absorb most of the energy in the corners causing food to overcook and toughen.
5. Stir foods from the outside to centre of the dish once or twice during cooking to equalize heat and speed microwaving.
6. Turn medium to large food items over once during microwaving. This enables even exposure to microwaves.
7. Elevating some types of food such as cakes, roast vegetables and dough products can be advantageous. It allows more energy to penetrate the food from all sides, base and top. Use a microwave-safe plastic or ceramic rack.

8. Do not elevate any special browning dishes, jugs of sauce or custard, small quantities of food or mugs of beverages.
9. Internal temperatures of foods continue to rise so that they continue cooking even after they have been removed from the microwave oven. It is better to undercook food as it will continue to cook once removed from the microwave.

MICROWAVE UTENSILS

- Containers, plates, dishes, etc. used in the microwave oven should always be microwave-safe. Check if they are microwave-safe on the underside of the utensil or contact the manufacturer.
- To test if a container, plate or dish is microwave-safe, place it into the microwave oven with 1 cup of cold water (in a microwave-safe cup) and heat on High (100%) Power for 1 minute. If the container is hot and the water is cold, the container is not suitable for microwave oven use. If the container is cold and the water is hot, then the container is suitable for microwave oven use.
- Metal containers and utensils should not be used in the microwave oven.



Care & Cleaning

- Switch off the microwave oven at the power outlet and remove the plug from the power outlet before cleaning.
- Keep the inside of the microwave oven clean. When food splatters or spilled liquids adhere to the microwave oven internal walls, wipe with a damp cloth. Mild detergent may be used if the cavity gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
- The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the microwave oven cavity, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides of the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use an abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave the microwave oven door open to prevent it from accidentally turning on.
- If steam accumulates inside or around the outside of the oven door, wipe with a soft dry cloth. This may occur when cooking foods high in moisture or if the microwave oven is operated under high humidity conditions, this is normal.
- Remove odours from your microwave oven by combining a cup of water with the juice of one lemon in a deep microwave-safe bowl, microwave on High PL10 for 5 minutes. Wipe the microwave oven cavity thoroughly and dry with a soft cloth.
- When it becomes necessary to replace the oven light, please consult your Breville service centre to have it replaced.
- Please do not dispose this appliance with domestic rubbish; it should be taken to the appropriate disposal centre provided by the local council municipalities.

- If storing the microwave oven, press the STOP/CLEAR button, switch off at the power outlet then unplug the power cord. Ensure the microwave oven is completely cool, clean and dry. Do not place heavy objects on top. Store the microwave oven upright.

BEFORE YOU CALL FOR SERVICE

- Check to ensure that the microwave oven is plugged in securely. If it is not, remove the plug from the power outlet, wait 10 seconds and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the power outlet with another appliance.
- Check to ensure that the control panel is programmed correctly and the timer is set.
- Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the microwave oven.



NOTE

If none of the above rectify the situation, then contact your Breville service centre. Do NOT try to adjust or repair the microwave oven yourself.



Troubleshooting

PROBLEM	POSSIBLE REASON	EASY SOLUTION
Microwave oven will not start	<ul style="list-style-type: none">• Power cord not plugged in properly or switched on• Fuse blown or circuit breaker problem• Trouble with outlet	<ul style="list-style-type: none">• Ensure door is shut properly• Check to make sure there are no obstructions or that the door is not damaged in any way
Microwave oven does not heat	<ul style="list-style-type: none">• Door not closed properly	<ul style="list-style-type: none">• Ensure door is shut properly• Check to make sure there is no obstructions or that the door is not damaged in any way
Microwave oven interfering with television reception	<ul style="list-style-type: none">• Radio and TV reception may be interfered with during operation. This is similar to the interference that is sometimes cause by vacuums, blenders etc.	<ul style="list-style-type: none">• Interference should stop once microwave is switched off
Dim microwave oven light	<ul style="list-style-type: none">• When operating on low power levels, the microwave oven light may be dimmer.	<ul style="list-style-type: none">• This occurrence is normal
Steam accumulating and/or hot air coming out from vents	<ul style="list-style-type: none">• During operation, steam may be produced. Most will exit through the vents, however some may accumulate around the microwave oven door.	<ul style="list-style-type: none">• Once microwave cooking is complete, steam condensation maybe removed by wiping over the affected area with a dry cloth



Notes



Breville Customer Service Centre

Australian Customers

Mail: Locked Bag 2000
Botany NSW 1455
AUSTRALIA

Phone: 1300 139 798

Fax: (02) 9700 1342

Email: askus@breville.com.au

Web: www.breville.com.au

New Zealand Customers

Mail: Private Bag 94411
Botany Manukau 2163
Auckland NEW ZEALAND

Phone: 0800 273 845

Fax: 0800 288 513

Email: askus@breville.co.nz

Web: www.breville.co.nz

Breville®
Thought for food

Breville is a registered trademark of Breville Pty. Ltd. A.B.N. 98 000 092 928.
Copyright Breville Pty. Ltd. 2016.

Due to continued product improvement, the products illustrated/photographed
in this brochure may vary slightly from the actual product.

LMO525 ANZ – B17