

## Warranty

1. The 12 month warranty period from the date of purchase does not cover misuse or broken parts caused by the user or by any other event.
2. Supplier may require the original appliance be returned to them with a copy of the receipt and warranty card and a brief statement indicating the defective nature of the merchandise.  
Items should be sent to:  
**GLOBAL SOURCE TRADING**  
**PO BOX 3046, Moorabbin East, VIC 3189**
3. Upon arrival, defect will be verified. Please note; appliances are covered for regular use. If the cause is found to be from misuse or abuse of the item(s) this may be outside the warranty and the customer may incur repair charges.
4. Replacement parts within the warranty period are posted without charge.
5. In the event that the appliance cannot be repaired, the supplier will send a replacement unit to the customer.
6. Warranty will not be extended if the appliance is repaired or replaced.
7. Remember warranty is only effective if:
  - The product is completely and correctly assembled by any end users.
  - The product is used under normal conditions for its intended purpose.
  - The product receives all necessary maintenance.
  - The product is not tampered with by any persons.
  - Receipt must be produced.
8. Contact After Sales Support on 1300 554 124 or [info@gstrading.com.au](mailto:info@gstrading.com.au) before sending any products back.
9. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



## TURBO TOWER FAN

### INSTRUCTION MANUAL

MODEL NUMBER: TF101N

# Contents

3	Safety Instructions
5	General Information
6	Description
6	Operating
7	Cleaning and Storage
8	Warranty

## • Battery Information

- Do not use different types of batteries or new and worn batteries together.
- Never use rechargeable batteries in this remote.
- Remove the batteries if you do not require the use of your remote control for a long time.
- Respect the environment when disposing of batteries.
- 2 X AAA batteries are required (not included).

**ATTENTION:** Function of the remote control button fully corresponds to that of the control panel buttons.

### **WARNING**

#### Handling the battery

- Improper or incorrect use of the battery may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- When the battery is exhausted, the remote will not function.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

### **WARNING**

#### Handle the Remote Control

- Do not drop or cause impact to the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the batteries from the remote control when not in use for a long period of time, as it could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire.

## Cleaning and Storage

### Cleaning After Use

When the fan stops, it should be cleaned and kept well.

Body: Clean it with soft cloth or soft thin paper. If the dust is uneasy to wipe away, rub it with soap water. Don't use gasoline, diluents and other solvents.

Wind wheel: Don't dismantle the unit to clean the wind.

### Storage

Always unplug the tower fan from the power point before storage.

Ensure the tower fan is clean. Wrap the power cord around the fan body.

The packing carton supplied with this product is an ideal storage box.

## Technical Specifications

Power supply: 220-240V


Rated Frequency: 50Hz

Rated Power: 100W

## Description

### Main Unit

- A. LED Display Cover
- B. Control Panel
- C. Decorate Ring
- D. Body
- E. Left Grille
- F. Power Cord
- G. Plug
- H. Base
- I. Decorate Cover
- J. Right Grille
- K. Remote Controller
- L. Intergrated Handle
- M. Wind direction arm

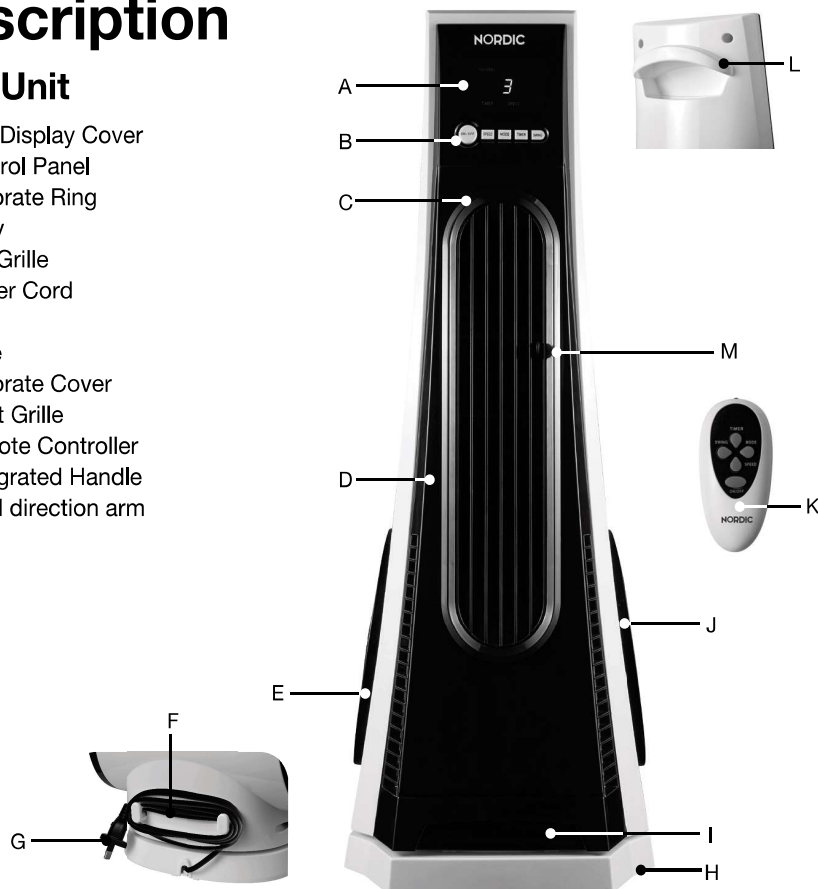

## Operating

### Manual Control

- **Timer:** you can set the time 1h, 2h, 3h, 4h, 5h, 6h, 7h, 8h with this button.
- **Swing:** When the unit is on, push it once and it will start to oscillate. Push it again, to stop the oscillation.
- **Speed:** There are 3 speeds: Low/ Medium/ High. Press this button and select the speed desired.
- **On/Off:** To switch the unit ON/OFF
- **Mode:** The fan will start from its normal wind setting. Push the MODE button to select the NATURE wind mode, and again for the SLEEP wind mode. Nature: stimulates the flow of a natural breeze. Sleep: intersperses 'natural' breezes with longer periods of stillness.

## Safety Instructions



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock and injury when correctly followed. Keep this manual in a safe place for future reference, along with the completed warranty card, purchase receipt and packaging. If applicable, pass these instructions onto the next owner of this appliance.

**⚠ WARNING** - This signal term indicates a moderate risk, which, if not avoided, may result in death or severe injury.

**⚠ CAUTION** - This signal term indicates a low risk, which, if not avoided, may result in minor or moderate injury.

**NOTE** - This signal term warns you of potential damage.

## General Information

- Your fan should be used in such a way that it is protected from moisture, e.g. condensation, splashed water, etc. Do not place or store your fan where it can fall or be pulled into water or any other liquid.
- Stand the fan on a stable, level surface during use. Do not allow your fan to sit on top of the mains cable.
- If the fan is knocked over during use, turn off the unit and unplug it from the mains socket immediately.
- Do not operate your fan in the bathroom.
- Do not use hazardous chemicals to clean or come into contact with the fan. Never attempt to use the fan without the base parts assembled or in a horizontal position.
- Never allow children to point their fingers into any power sockets or moving parts.
- Fan slots and oscillating feature are a potential finger entrapment hazard for toddlers and small children. Parental supervision is required.
- Do not operate this appliance with anything other than your hands. Do not use the appliance with wet hands.
- For fans that require assembling, to avoid personal injury, please ensure the product has been fully assembled according to the instructions within this manual.
- The use of attachments which are not recommended or sold by the appliance manufacturer may cause a risk of injury to persons.
- Do not remove any fixed covers. Never use this appliance if it is not working properly, or if it has been dropped or damaged. Always contact a qualified technician to carry out repairs.
- When the fan is assembled, the fan guard should not be taken off anymore.

## Important Safeguards

- Fully unwind the power cord before use.
- Connect only to 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Switch the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- **⚠ WARNING:** Children should be supervised to ensure that they do not play with the appliances.
- It is recommended to inspect the appliance regularly. Do not use the appliance if the power supply cord, plug, connector or appliance becomes damaged in anyway. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Return the entire appliance to the nearest authorised Nordic Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Nordic Service Centre.
- This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a hot source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation. This fan is suitable work on tropical climate.

### Attention

1. Never insert fingers pencils or any other object through the holes of the plastic shell.
2. To prevent risk of fire and electric shock. Do not use the unit near windows.

### ⚠ WARNING

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The guard is not removable, please do not attempt to remove it This fan should be indoor use only.
- This fan can be use in tropical climate.

### ⚠ WARNING

- To reduce the risk of electric shock, do not immerse or expose the product, flexible cord or plug to rain, moisture or any liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- In the event where the appliance is dropped into water, turn off the power at the power outlet and remove plug immediately.  
**DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE POWER OUTLET.**
- It is important to note that the appliance will have to be inspected by a qualified technician before using it again.

3. Power plug must be removed from power socket before cleaning serving maintenance and move from one location to another. The fan should be placed on a flat and stable surface when operating to avoid overturning.
4. Do not put on the product in wet place. For example, bathroom etc.
5. Don't use it in the cook-room in order that keeping the plastic part away from greasy dirt.
6. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or similar qualified person in order to avoid a hazard.

### ⚠ WARNING

To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device, unplug or disconnect this fan from the power supply before servicing. Unplug the fan before cleaning.