Clothing Care System (AIRDRESSER)

User manual

DF60*8****G





Contents

Safety information	4
What you need to know about the safety instructions	4
Important safety symbols	4
Important safety precautions	5
To minimize the risk of fire in a product, the following should be observed	7
General warnings	8
Electrical warnings	10
Installation warnings	11
Cleaning warnings	12
Before you start	13
ENVIRONMENT	13
Installation	13
Product overview	16
Control panel	18
Cycle overview	20
Fabric care guide	24
Fabric care labels	28
Smart control	29
Product and accessory use	33
Using a cycle	33
Using the accessories	35
Cleaning and maintenance	43
Exterior	43
Water tanks	44
Water tray	45
Air Filter	46
Lint filter	48
Descaling	49
Moving the product to another location	50
Troubleshooting	51
Notification messages	51
Checkpoint	52

Specifications 54

Safety information

Congratulations on your new Samsung product. This manual contains important information on the installation, use and care of your product. Please take some time to read this manual to take full advantage of your product's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new product. Please store the manual in a safe location close to the product for future reference. Use this product only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your product. Because the following operating instructions cover various models, the characteristics of your product may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

⚠ WARNING

Hazards or unsafe practises that may result in severe personal injury, death and/or property damage.

⚠ CAUTION

Hazards or unsafe practises that may result in personal injury and/or property damage.

⚠ CAUTION

To reduce the risk of fire or explosion, follow these basic precautions.

CAUTION. Hot surface

NOTE

Indicates that a risk of personal injury or material damage exists.

Read the instructions

These warning signs are here to prevent injury to yourself and others.

Please follow them explicitly.

After reading this manual, store it in a safe place for future reference.

Read all instructions before using the product.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this product, familiarise yourself with its operation and exercise care when usina it.

↑ WARNING - Risk of Fire

- Product installation must be performed by a qualified technician.
- Install the product according to the manufacturer's instructions and local codes.
- To reduce the risk of severe injury or death, follow all installation instructions.

Important safety precautions

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- **1.** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 3. Children should be supervised to ensure that they do not play with the appliance.

Safety information

- 4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- **5. CAUTION**: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- **6.** This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments:
 - farm houses:
 - by clients in hotels, motels and other residential type environments:
 - bed and breakfast type environments.
- 7. WARNING: This appliance is intended only for drying textiles washed in water
- **8. WARNING**: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

To minimize the risk of fire in a product, the following should be observed

A CAUTION

Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a product. Oil-affected items can ignite spontaneously. especially when exposed to heat sources such as in a product. The items become warm. causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape. the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a product they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard. The 'cool down' cycle of products should be used to reduce the temperature of the items. They should not be removed from the product or piled or stacked while hot.

Items that have been previously cleaned in, washed in, soaked in or spotted with petrol/ gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in a product. Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosene, spot removers(some brands), turpentine, waxes and wax removers.

Items containing foam rubber(also known as latex foam) or similarly textured rubber. Like materials should not be dried in a product on a heat setting. Foam rubber materials can, when heated, produce fire by spontaneous combustion.

Fabric softeners or similar products should not be used in a product to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.

Undergarments that contain metal reinforcements should not be placed in a product. Damage to the product can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.

Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in a product.

Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a product.

Do not dry unwashed items in the product(or washing machine drying mode,etc).

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, Kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the product.

Safety information

Items such as foam rubber(latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the product.

Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

The final part of a product cycle occurs without heat(cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a product. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a product they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.

Never stop a product before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Remove all objects from pockets such as lighters and matches.

The product(or washing machine drying mode, etc) is not to be used if industrial chemicals have been used for cleaning.

General warnings

♠ WARNING

- To avoid electric shock, fire, and/or death, make sure the product is properly installed and grounded as described in this manual before using the product.
- Only use the product for its intended purposes. Damage incurred from using the product for purposes other than those specified in this manual are not covered by the warrantv.
- To avoid physical injury and/or product damage, do not climb, stand, or hang on the product.
- Do not disassemble or modify the product in any way.
- Do not allow children to play in, on, or around the product. Close supervision of children is necessary at all times.
- To avoid fire, physical injury, and/or death, keep all packaging material away from children and properly remove and dispose all packaging material.
- Do not touch or operate the product with wet hands.

- To avoid electric shock and/or fire, keep all animals or other foreign objects out of the product.
- If you hear strange noises, smell strange odours, and/or detect smoke from the product, immediately unplug the product.
- Do not place heavy or dangerous objects in, on, or around the product.
- To avoid electric shock, fire, and/or death, do not repair or replace any part of the product or attempt any servicing unless specifically recommended in the user manual or in published user-repair instructions that you understand and have the skills to carry
- Take out all personal belongings (electric devices, lighters, matchboxes, and so on) from pockets.
- To avoid fire and/or explosions, do not dry items that have been previously cleaned in. washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, cooking oils, or other flammable or explosive substances.
- The product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety.
- Before disposing of the product, remove the door to the drying compartment, and cut off the power plug to prevent reuse.
- Do not touch or disassemble the electrical outlet of the product. In the event of a gas leak, make sure to ventilate the location and immediately contact a Samsung service centre.
- To avoid damaging the glass panel, make sure to protect the front at all times.
- To avoid physical injury and/or product damage, do not step on the tank doors.
- Do not put hands, feet, other body parts, or metal objects under the product.
- Do not use other products to dry the interior. Do not use candles to remove interior odours.
- Do not open the door while the product is operating. Opening the door while the product is operating will affect product performance and may cause condensation to damage flooring.
- Do not drink the water from the Refill Tank or the Drain Tank.
- Clean the lint filter before or after each load.
- Do not use fabric softeners or other products to eliminate static unless recommended by the manufacturer of the fabric softeners or products.
- Keep fingers out of pinch point areas. Use caution when closing the door when children are nearby.
- Do not use the product to dry items containing foam rubber or other rubber-textured items

Safety information

- To avoid product damage, excessive noise, or fire, do not insert objects into the steam nozzle.
- Do not place your hands or body near the steam nozzle during operation. The hot steam can cause an injury.
- Do not open the door during operation. The high internal temperature can cause an
- If a problem occurs during steam process, stop the product immediately and remove all items from the product. If items are not removed immediately, they will stay damp. causing damage to the fabric or smell.
- Before placing the clothing into the product, make sure to empty all pockets.
- Contains fluorinated greenhouse gases.
 - Hermetically sealed equipment.

Do not vent gases into the atmosphere.

- Refrigerant (Type): R-134a (GWP = 1430)
- Refrigerant (Charging): 0.15 kg, 0.214 tCO₂e

Electrical warnings

♠ WARNING

- Regularly remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth.
- Unplug the power plug and clean it with a dry cloth.
- To avoid risk of electric shock, always unplug the product before disassembly or repair.
- Do not pull the power cord when unplugging the power plug. To unplug the power plug, firmly pull the power plug straight out.
- To avoid electric shock, do not use an extension cord.
- Do not use a damaged power cord or power plug. Do not attempt to repair, disassemble, or modify the power cord or power plug. For any repairs, contact your nearest Samsung service centre.
- Plug the power cord into a wall socket that meets local electrical specifications. Use the socket for this appliance only, and do not use an extension cord.
- When moving the product, make sure to keep the power cord protected at all times.
- To avoid electric shock, fire, serious injury, product damage, and/or death, the product must be plugged into a properly grounded outlet. Make sure the wall outlet and circuit are checked by a qualified electrician.
- The product must be equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

- The product must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- Before using, make sure there is dedicated, grounded electrical-outlet rated for use with this product. It is the owner's responsibility to replace a standard 2-prong wall outlet with a standard 3-prong outlet.
- To avoid electric shock, properly ground the product that conforms to all governing codes and ordinances. Follow the instructions in the user manual.
- The product must be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate. This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires.
- Connect to a properly rated, protected, and sized power circuit to avoid electrical overload. Improper power circuits can melt, creating electric shock or fire.
- Do not, under any circumstances, cut or remove the ground prong from the power cord. To prevent personal injury or product damage, the electrical power cord must be plugged into a properly grounded outlet.
- Do not use a multi socket outlet which is not properly grounded (portable). Upon using a properly-grounded multi socket outlet (portable), use a product with the current capacity of 15 A or higher alone. Failure to do so may result in electric shock or fire due to the heat of multi socket outlet. The power may be shut off when the circuit breaker is operated.
- The product must be connected to a grounded metal, permanent wiring system or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance. Electric shock can result if the product is not properly grounded.
- Improper connection of the equipment grounding conductor can result in electric shock. Check with a qualified electrician or service person if you are in doubt that the product is properly grounded.

Installation warnings

♠ WARNING

• Only install the product in a stable, well-floored location. Do not install the product in locations prone to vibrations or where the product may tip over, such as ships or airplanes. Contact a Samsung service centre if you are unsure of the installation location.

Safety information

- Do not install the product in locations exposed to the weather or temperatures below freezing. If the product was shipped in or at temperatures below freezing, allow the product to warm before installing.
- To avoid electric shock, fire, serious injury, product damage, and/or death, do not install the product in humid locations (such as a bathroom or sauna).
- To avoid fire, smoke, and/or product damage, do not install the product near other heat sources (such as a stove or heater).
- To avoid fire or smoke and/or product damage, do not place candles or other flammables on, in, or around the product.
- To avoid physical injury and/or product damage, contact a Samsung service centre before moving the product.
- Install the product where the power plug is easily accessible. To avoid electric shock and/or fire, unplug the product when not in use.
- If the installation location has been flooded, do not go near the product and immediately contact a Samsung service centre.
- To avoid fire, smoke, and/or product damage, remove all protective film from the product.
- To prevent product damage and/or physical injury, have at least two people move the product.

Cleaning warnings

♠ WARNING

- To avoid electric shock, do not use sharp objects to operate or clean the product.
- Do not spray water directly onto the product when cleaning it.
- Do not use bleaching agents on the exterior of the product. Bleaching agents may discolour the exterior.
- Wipe the interior with a dry cloth after use.
- After using the product, wipe its inner side with a dry cloth.
 - The product could be stained by contamination such as long hair or due to dust and water drops that may form inside.
- If contamination (detergent, dirt, food residue, etc.) has accumulated in the product or any accessories, unplug the power cable and then wipe the contaminated area with a soft. wet cloth.
 - Do not expose the product or the accessory to cleaning or bleaching agents or apply these to the product or accessory.
 - Otherwise, this may result in discoloration, deformation, damage, or rust.

ENVIRONMENT

Please dispose of the packaging materials for this product in an "environmentally friendly" manner. For further detail, please contact your local area authority.

Installation

Install the product according to the instructions in this manual and local codes.


Installing the product

1. Select a solid, level location with adequate space for the following clearances

Тор	25 mm
Sides	5 mm
Rear	15 mm

- If the minimum clearances are not met, performance will decrease due poor ventilation and condensation may occur on the product exterior.
- Do not install the product in direct sunlight or hot and cold places. The ambient temperature must be between 10 °C-35 °C. If the ambient temperature is too high or too low, the product may not operate normally, or performance may decrease.


2. Turn the leveling feet (A) clockwise or counterclockwise to adjust the height until the product is level.

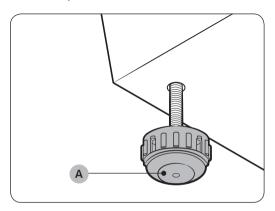



If the product wobbles or if you want to raise the height of the rear side, assemble the provided rear levelling feet on the bottom-rear sides of the product.

- **3.** Insert the water tray as shown in the figures.
 - Make sure the side marked 'TOP' is facing upward.

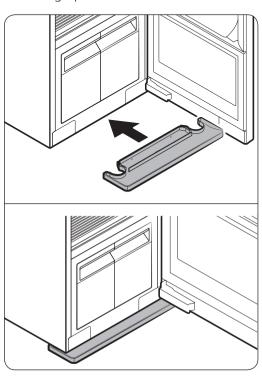


- **4.** Plug in the product to a 230 V / 50 Hz arounded outlet.
 - If you do not have grounded outlets. contact a Samsung service centre for alternative methods to ground the product.

NOTE

- After installing the product, you must wait at least 2 hours before using it.
- The product consumes more water the first time the product is used. You may have to fill the Refill Tank more than one time.

Securing AIRDRESSER with the anti-tip strap (optional)

AIRDRESSER may tip-over by external force or children. If necessary, use the anti-tip strap to secure AIRDRESSER and prevent tip-over. (Refer to the figure.)

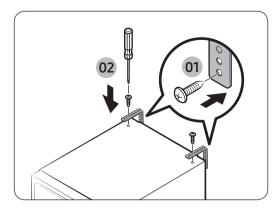

↑ CAUTION

You must unplug the product before securing AIRDRESSER with the anti-tip strap.

NOTE

- Use the provided screw to fasten the anti-strap to a wall.
- Use the screws fastened on top of AIRDRESSER to fasten the anti-strap to AIRDRESSER.

Setting the language


When you turn on the product for the first time after the installation, the language selection screen appears on the control panel display. Follow the instructions to select the language.

- **1.** Tap < or > to select a language.
- 2. Tap and hold Start/Pause ▷ to save the selected language.

(E) NOTE

- Language setting may not be applicable in some countries.
- To change the language afterward, tap and hold Normal and Delicates for 3 seconds, and then follow the above instructions

Product overview

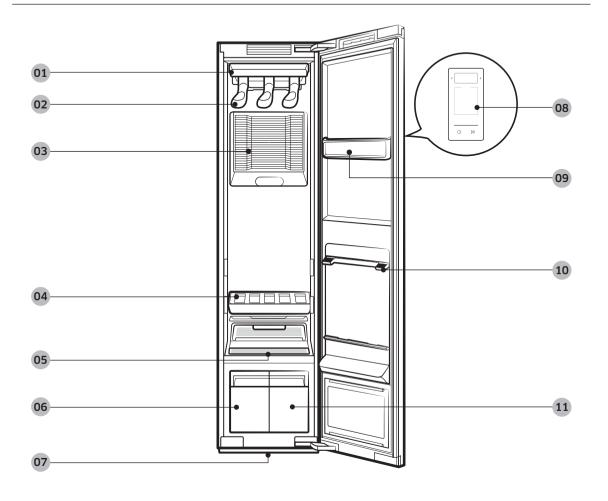

01 Air hole

02 Air hanger

04 Shelf

05 Lint filter

07 Water tray

08 Control panel

10 Shelf holder


11 Refill Tank

03 Air Filter

06 Drain Tank

09 Accessory care zone

Accessories



Shelf



Water tray



Air hanger



Weight kit



Regular hanger kit



Cleaning cloth



User manual



Anti-tip strap



Screw (for anti-tip strap)



Screw anchor (for anti-tip strap)



Rear levelling feet

Control panel




01 Display

Displays the selected cycle and estimated time remaining, notifications, and Wi-Fi connectivity.

02 Cycles

Tap a cycle to select. For more information about cycles, see page 20.

03 Silent / Child Lock (3 sec)



Tap and hold for 3 seconds to turn Child Lock on or off. Child Lock deactivates all buttons except **Power** \circ . Child Lock ⊕ (E) NOTE When Child Lock is on, it will remain on until you turn it off.

04 Delay End / Keep Fresh (3 sec)

Tap to turn Delay End on, and then tap to increase the end time (from 1-24 hours).
■ NOTE
 You cannot use Delay End with Sensor Dry. When Delay End is on, the display will turn off to save energy. Some end times may not be available depending on the selected cycle. Depending on the items and environment, the actual end time
may be different than the set time.
Tap and hold for 3 seconds to turn Keep Fresh on or off. You can keep items fresh if you will not be able to immediately take items out after a cycle has finished.
NOTE
 Keep Fresh stays on up to 24 hours after a cycle has finished. Turning off the power or opening the door turns Keep Fresh off. When Keep Fresh is on, the display will turn off to save energy.

05 Smart Control $\widehat{\square}$

Tap to turn Smart Control on or off. For more information about Smart control, see page 29.

06 Power (1)

Tap to turn the power on or off.

07 Start/Pause ▷||

Tap and hold to start the product. Tap to pause the product.

Cycle overview

Daily cycles

Cycle	Description
Normal	For freshening your everyday wear.
Delicates	 For delicate items such as chiffon, lace, and items with decorations. For rayon, you must use this cycle.
Quick	To quickly care for items with light odours and wrinkles.
	To sanitize your clothes with steam.
	♠ NOTE
Sanitize	 Do not put more than one large or bulky item. Large or bulky items may block the steam and airflow. If you stop or change the cycle when the Sanitizing message appears on the display, items may get damaged or not dry completely.

Dry cycles

⚠ CAUTION

Do not use any of the following items for Dry cycles.

- Leather, fur. feather, velvet, silk.
- Any items containing rubber or sponge.
- Items made of wool blended fabrics, water-repellent fabrics, silk-blended, or hempblended fabric.
- Fur blankets with fur length exceeding 1 cm, wool blankets, carpets, mattresses.
- Lingerie with laces, pantyhose, stockings.

♠ NOTE

Drying results may vary depending on thickness of the items.

Cycle	Description
	AIRDRESSER automatically sets the time to dry items.
	NOTE NOTE
Sensor Dry	 Using Sensor Dry causes the Drain Tank to fill quickly. Sensor Dry may not dry excessively wet items and large or bulky items well. If items are not dry, run the cycle again.
	Manually set the time (1-3 hours) to dry items.
Time Dry	(a) NOTE
Time Dry	Time Dry may not dry excessively wet items and large or bulky items well. If items are not dry, run the cycle again.
	For dehumidifying the surrounding area. You can select 2 or 4
	hours.
Room Care	■ NOTE
	Make sure the product is empty when using Room Care.
	The indoor temperature may increase.

Special cycles

Cycle	Description
Suits	For sharpening creases in trousers. NOTE Put the jacket in the middle air hole and trousers on the right air hole. For best results, use with the weight kit.
School uniform	For school uniforms that cannot be washed or dried daily.
Wool/Knit	For woollen or knit items. NOTE To avoid deforming items, neatly fold items and lay on the shelf.
Outdoor	For outdoor or active wear.
Down Jackets	To fluff heavy, down-filled jackets that have been stored for a long time. NOTE To prevent blocking air circulation, hang only one item in the middle air hole.
Fur/Leather	Eliminates moisture and dust from fur and leather items. NOTE Operating noise may be louder during this cycle. Follow all item care labels. For best results, use for only one item. Make sure fur items are dry before using this cycle.
Heavy Duty	For caring for thick fabric items such as sweaters.
Self Clean	 Automatically cleans the product. NOTE Make sure the product is empty. For best results and optimal cleaning, do not stop the cycle or open the door before Self Clean is complete. This cycle does not eliminate mould.

Download cycles

You can download more cycles from the SmartThings app.

- 1. Tap Power ().
- **2.** Tap **Special** repeatedly to select **Download**.
- 3. On your smartphone, follow the onscreen instructions to download available cycles.
- You can download up to 10 cycles.
- You can download the following cycles.
 - Winter Coat, Denim, Down dry, Babywear, Bedding, Doll, Accessories.

Fabric care guide

- Fabrics have different care management depending on how they were processed and finished. This fabric care guide does not cover all materials and therefore use it for just a reference. Make sure to check the care label on your clothing before using with AIRDRESSER to prevent any damage.
- Do not put items that are not colourfast, are heat-sensitive, or are not suitable for washing with water in the General, Special, or Sanitize cycles. Do a water blot test on a small, inconspicuous spot (an inside seam) to determine if the fabric is colourfast. For further assistance, consult the clothing manufacturer, a dry-cleaning professional, or a more detailed fabric care quide.

Cycle category

Refer to the following table to check specific cycles included in each category stated in the Fabric care guide table.

Category	Cycles
General cycles	Normal, Quick, Delicates
Special cycles	Suits, School uniform, Wool/Knit, Outdoor, Down Jackets, Fur/Leather, Heavy Duty, Winter Coat**, Denim**, Accessories*
Sanitize cycles	Sanitize, Babywear**, Bedding**, Doll**
Dry cycles	Sensor Dry, Time Dry, Down Dry**

^{* =} Special cycles / ** = Download cycles

Fabric care guide table

Natural fibres - vegetable fibres

	Cycles						
Fabric -	General					Clothes / Remarks	
	Reducing wrinkles	Deodorising	Special	Sanitize	Dry	Ciotiles / Remarks	
Cotton		•	•	•	•	Towels, socks, underwear, jeans, sportswear, t-shirts, blankets Wrinkles on 100 % cotton fabrics may remain. Iron after cycle if desired.	
Linen, hemp, ramie		•	•	•	•	Summer clothes, tablecloths Some wrinkles may remain. Make sure fabrics are washable/ hand washable before using the General, Special, or Sanitize cycles. Lay delicate clothes on shelf. Do not use starched clothes.	
Rayon	•	•	•		•	Suit lining, blouses, neckties, pyjamas	

● = Possible / × = Check care label

Natural fibres - animal fibres

	Cycles						
Fabric –	General					Clothes / Remarks	
Tubile	Reducing wrinkles Deodorising Special Sanitize Dry	Dry	cioties / Remarks				
						Coats, suits	
Alpaca,	*	*	•			Lay knitwears on the shelf. Alpaca and camel hair shrink in hot water.	
camel hair, cashmere						Scarves, knitwear	
casimere		*	•			Lay knitwears on the shelf. Alpaca and camel hair shrink in	
						hot water.	
						Coats, scarves	
Fur, leather			•*			* Only use Fur/Leather cycle.	
r or, reactier						Leather must be 100 % natural	
						leather (No artificial leather)	
						Silk neckties, ribbons, scarves,	
Silk						blouses	
Sinc						Silk fabrics are not suitable for AIRDRESSER.	

		С					
Fabric	Gen	eral	Special Sanitize			Clothes / Remarks	
Tablic	Reducing wrinkles	Deodorising		Sanitize	Sanitize	Sanitize	Dry
Mark		×	● *		•	Sweaters, knitwear Lay knitwears on the shelf. Some wool shrinks when washed in hot water. Make sure fabrics are washable/hand washable before using the General or Special cycles. * Wool/Knit cycle is recommended.	
Wool	•	•	•*	*	•	Winter coat, suits Lay knitwears on the shelf. Some wool shrinks when washed in hot water. Make sure fabrics are washable/hand washable before using the General, Special, or Sanitize cycles. * Winter Coat or Suits cycle is recommended.	

● = Possible / × = Check care label

Artificial fibres

		C					
Fabric	Gen	eral	Special Sanifize Drv	Clothes / Remarks			
Tublic	Reducing wrinkles	Deodorising		Sanitize	Sanitize	Dry	Dry
Acetate						Suit lining, blouses, neckties,	
Acctate						pyjamas	
Acrylic						Thermal underwear, knitwear	
Acrylic	•	•		•		Lay clothes on shelf.	
						Stockings, lingerie	
Nylon	•	•		•		Lay clothes on shelf.	
	•	•	•	•	•	Sportswear	
						Stretchable clothing (containing	
						less than 5 %)	
Polyurethane	•	•	•	•	•	If the item contains more then 5	
						% polyurethane (ex. Swimwear),	
						check the care label.	
Dolvostor						Outdoor wear, sports wear,	
Polyester	•			•		T-shirts, shirts, blouses	

^{● =} Possible / × = Check care label

Fabric care labels

Most clothing includes fabric care labels which contain instruction for proper care. The following table contains some of the symbols that may help you choose appropriate items for AIRDRESSER

Fabric care labels that can be used with AIRDRESSER

Category	Label	Meaning	Use with AIRDRESSER
		Normal	0
,,	\Box	Permanent press	0
Washing Jahala	\square	Delicate	0
Washing labels	₩	Do not wash	0*
	A	Hand wash	0
		No heat	X
	0	Low	0
	<u></u>	Medium	0
	<u>-</u>	High	0
Tumble dryer labels		Normal	0
		Permanent press	0
		Delicate	0
	*	Do not tumble dry	0
		Hang dry	0
Drying labels	III	Drip dry	0
		Dry Flat	O**
		Dry in shade	0
	**	Do not dry	Х

^{*} Some clothing that does not recommend washing (such as fur or leather fabrics) can be used with AIRDRESSER. Please refer to the fabric care guide.

^{**} Use the rack for items with this symbol on the fabric care label.

Smart control

Wi-Fi connection

- Recommended encryption methods are WPA/TKIP and WPA2/AES. Newly developed Wi-Fi protocols or unapproved Wi-Fi protocols are not supported.
- The reception sensitivity of a wireless network may be affected by surrounding wireless environments
- If your Internet provider has registered the MAC address of your PC or the modem. module for permanent use, your Samsung AIRDRESSER may fail to connect to the Internet. If this is the case, contact your Internet provider
- The Internet firewall may interrupt your Internet connection. If this happens, contact vour Internet provider.
- If Internet failure continues after following the measurement of your Internet provider. contact a local Samsung retailer or service centre.

Downloading the app

On an app market (Google Play Store, Apple App Store, Samsung Galaxy Apps), search for the SmartThings app, and then download and install the app on your device.

NOTE

- SmartThings may not be compatible on some tablets or smartphones.
 - The recommended Android OS is 6.0 or higher (with minimum 2 GB or RAM).
 - The supported display resolutions for Android are 1280 x 720 (HD), 1920 X 1080 (FHD), 2560 x 1440 (WOHD).
 - The recommended iOS is 10.0 or higher (iPhones must be iPhone 6 or higher).
 - The supported display resolutions for apple devices are 1334 X 750, 1920 x 1080.
- The app is subject to change without notice for improved performance.

Log in

You must first log into SmartThings with your Samsung account. To create a new Samsung account, follow the instructions on the app. You don't need a separate app to create your account.

NOTE

If you have a Samsung account, use the account to log in. A registered Samsung smartphone user automatically logs in.

Registering your appliance to SmartThings

- 1. Make sure your smartphone is connected to a wireless network. If not, go to Settings, turn on the wireless connection, and then select an AP (Access Point).
- 2. Open SmartThings on your smartphone.
- 3. If a message of "A new device is found.". select Add.
- **4.** If no message appears, select + and select your appliance in a list of devices available. If your appliance is not listed, select **Device Type** > **Specific Device Model**, and then add your appliance manually.
- **5.** Follow the onscreen instructions to complete registration.

SmartThings overview

Category	Function	Description
Monitoring	Cycle Status	You can check the current cycle and options, and the remaining cycle time.
	Smart Control	The Smart Control status is shown for AIRDRESSER.
	Energy Monitoring	You can monitor the energy consumption status.
Control	Start / Pause / Cancel	Select a cycle and necessary options, and then select Start / Pause / Cancel to start and operation, to stop temporarily, or to cancel the current operation.
Notification	Cycle Completed	Notifies you the current cycle is complete.

Category	Function	Description
AIRDRESSER functions	Care Recipe	Select the fabric type and options and get recommendations for the most suitable cycle.
	My Closet	By inputting clothing information (such as fabric material), you can add your clothes to the app and get recommended cycles and a care history.
	Special Cycle Management	You can save up to 9 cycles and you can delete or change the order of the cycles.
	HomeCare Manager	Get advice to help you keep your AIRDRESSER in perfect condition. Check your cycle usage patterns, energy consumption, and get alerts for product maintenance.

Open Source Announcement

The software included in this product contains open source software. You may obtain the complete corresponding source code for a period of three years after the last shipment of this product by sending an email to mailto:oss.request@samsung.com.

It is also possible to obtain the complete corresponding source code in a physical medium such as a CD-ROM; a minimal charge will be required.

The following URL http://opensource.samsung.com/opensource/SMART AT 051/seg/0 leads to the download page of the source code made available and open source license information as related to this product. This offer is valid to anyone in receipt of this information




NOTE

Hereby, Samsung Electronics, declares that the radio equipment type appliance is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following Internet address: The official Declaration of conformity may be found at http://www.samsung.com, go to Support > Search Product Support and enter the model name.


Wi-Fi max transmitter power: 20 dBm at 2.412 GHz - 2.472 GHz

Product and accessory use


Using a cycle

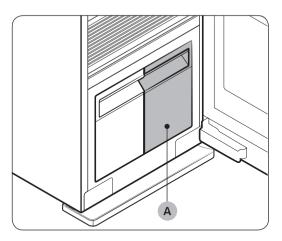

1. Make sure the Refill Tank (A) is filled with water

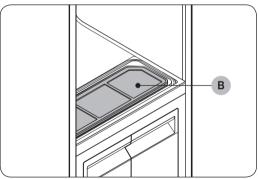

- 2. Make sure the lint filter (B) is clean.
- 3. Input clothes as instructed in the Using the accessories section.

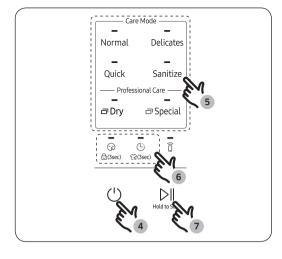

- 4. Tap Power 🖰.
- **5.** Select a cycle.
 - Tap Normal, Delicates, Quick or Sanitize.
 - For Dry cycles, tap **Dry** repeatedly to select a desired dry cycle.
 - For Special cycles, tap **Special** repeatedly to select a desired special cvcle.
- **6.** Select options if necessary.
 - Silent ♥, Child Lock ₺, Delay End ७, Keep Fresh €.
- 7. Tap and hold Start/Pause ▷ for 3 seconds.

Product and accessory use

Usage guidelines

Before use

- This product cannot be used to clean items. For best results, wash and dry all items before using the product.
- Before using the product, we recommend washing items with strong odours or items that have been stored for a long time.
- Separate items by odour strength.
- Check all clothing or item labels before using the product.
- Before placing the clothing into the product, make sure to empty all pockets.
- Do not use the product as a storage closet.
- The product may not remove pet hair.

During use

- Make sure items are not touching the bottom of the product. If necessary, use the shelf to stop items that are hung from touching the bottom of the product.
- Hissing noises may occur during a steam process.
- If you need to stop a cycle before it will finish, make sure to run the Dry cycle.
- Operating time depends on the environment and type of items.
- If used consecutively, the product may display a different operating time than what will occur.
- Do not open the door while the product is operating.

After use

- The amount of wrinkles removed may vary depending on the fabric type.
- Remove items immediately after a cycle has finished. If you cannot remove items immediately, use Delay End or Keep Fresh.
- When removing items, hold both the items and the hanger.

Using the accessories

Air hangers

Use the provided Air hangers for items such as jackets, sportscoats, and blazers.

NOTE

- Make sure the interior and exterior of the hangers are clean and free of foreign matter.
- Do not use hangers for knits, wools, lingerie.
- The maximum lengths of items must be 110 cm for tops and 100 cm for bottoms.
- Depending on the type or size of the fabric, unwanted wrinkles may form on the neck of your clothing.



To use the Air hangers

- **1.** Hang items on hangers in the same direction.
 - To prevent items from falling off the hangers, make sure to button all buttons and zip all zippers.
 - Make sure all items are hung flatly. Make sure the hanger clips do not protrude outward.
- 2. Slide the hangers into the air holes until vou hear a clicking sound.
 - Make sure hangers are facing the same direction.
 - If the Air hangers are not properly inserted into the air hole, vibrations and noises may occur.



For best results, avoid hanging longer items from the middle hole.


Product and accessory use


Regular hanger kit

You can use the regular hanger kit to use regular hangers to hang your items. However, for best results, we recommend using the Air hangers.

(E) NOTE

- Use hangers that will not be deformed by heat.
- Make sure the interior and exterior of the hangers are clean and free of foreign matter.
- Do not use plastic/silicone/wooden hanger and hangers with adhesive.
- Do not use hangers from laundry that may become rusty.

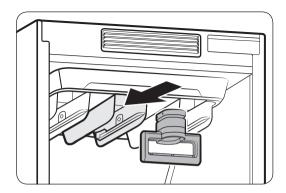

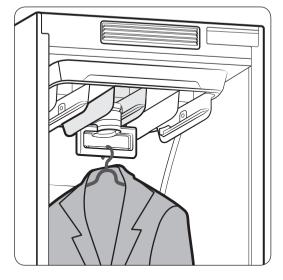

To use the regular hanger kit

- **1.** Hang items on hangers in the same direction
 - To prevent items from falling off the hangers, make sure to button all buttons and zip all zippers.
 - Make sure all items are hung flatly. Make sure the hanger clips do not protrude outward.
- 2. Slide the regular-hanger kit into the air holes until you hear a clicking sound. and then hang the hangers on the regular-hanger kit.
 - Make sure hangers are facing the same direction.
 - If the regular-hanger kit is not properly inserted into the air hole. vibrations and noises may occur.





For best results, avoid hanging longer items from the middle hole

Weight kit

NOTE

- Make sure the trousers or weight kit does not touch the bottom of the product.
- The maximum length of trousers must be 100 cm.

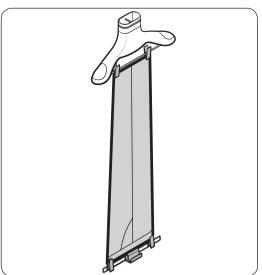

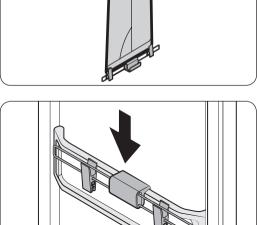

To use the weight kit

- **1.** Clip the bottom of the trousers to the Air hanger.
- **2.** Clip the other end of the trousers to the weiaht kit.
- **3.** Slide the Air hanger into the air holes until you hear a clicking sound.

(E) NOTE

For sharper creases, spread out the trousers by moving the clips outward.

Store the weight kit on the accessory care zone when not in use.


Product and accessory use

Shelf

Use the provided shelf for items that cannot be used with hangers.


(E) NOTE

- Only place clothes or clothing accessories. Do not put heavy items or use the shelf to store any other objects
- Make sure children do not sit or climb on the shelf.
- Make sure items do not hang off the front, back, or sides of the shelf, or hang through the shelf grates.
- Do not stack items on top of other items.

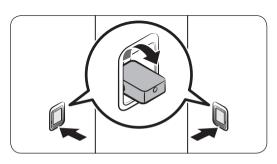

To use the shelf


1. On the side walls, press the bottom part of the shelf holders to turn them out.

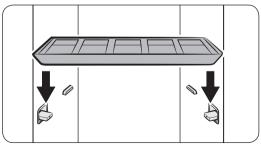

2. Place the shelf on the shelf holders. Make sure the grooves on the shelf are firmly sitting on the holder.



A gap between the sides of shelf and the side walls is normal.

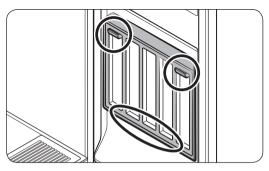


Store the shelf on the door when not in use. Place the shelf on the bottom holder. and then hang it on the top holders.

Accessory care zone


Use the accessory care zone for scarves.

To securely hang the scarf, refer to the figures below.

Method 1

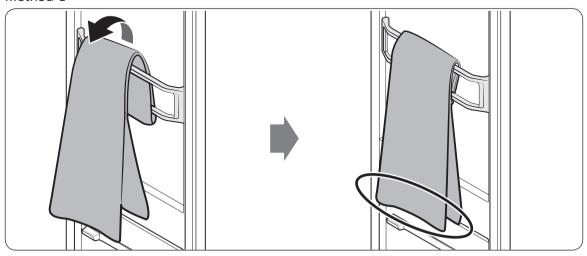

Method 2

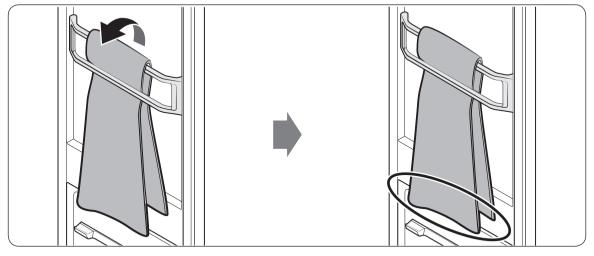


- Make sure the lengths of both ends are even.
- Depending on the fabric type, wrinkles may not be removed.

Product and accessory use

Refill Tank




- Before using the product, make sure there is water in the Refill Tank.
- The product consumes more water the first time the product is used.
- It is recommended to use filtered water.
- If you are not going to use the product for a long time, empty the Refill Tank.
- A full Refill Tank lasts approximately 4 cycles.
- Fill the Refill Tank with water only. Putting any other liquids, such as detergent or fabric softener, may cause a problem.
- Do not use the water in the Drain Tank to fill the Refill Tank.

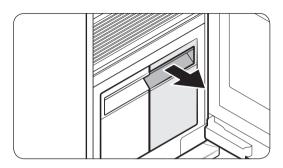

To fill the Refill Tank


1. Pull out the Refill Tank

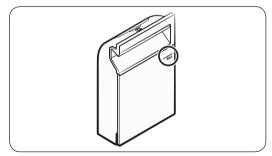

- 2. Open the back cover, fill to the MAX line.
- **3.** Reinsert the Refill Tank.

Drain Tank

Before using the product or if you are not going to use the product for a long time, make sure to empty the Drain Tank.

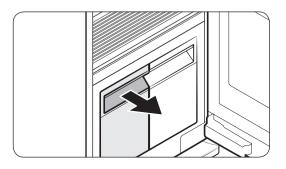

To empty the Drain Tank

- 1. Pull out the Drain Tank.
- **2.** Empty the tank.
- 3. Reinsert the Drain Tank


Fresh Finish™

Fresh Finish[™] gives items a pleasant fragrance.




- Spray your desired perfume 4-5 times on a cotton pad, and then place the pad in Fresh. Finish™. The strength of the scent diffused through Fresh Finish™ may differ depending on the perfume used, and the scent may remain inside the AIRDRESSER even after the cycle is complete.
- Mold may grow if you leave the cotton pad in Fresh Finish™ for too long.

To change the cotton pad

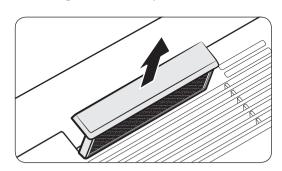


1. Remove Fresh Finish™


Product and accessory use

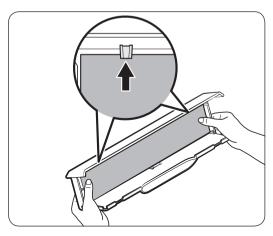

2. Spray a desired perfume 4-5 times on a cotton pad, and then place the pad in Fresh Finish™

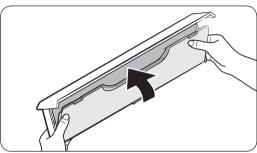

3. Close the cover of Fresh Finish™ until you hear it click into place.

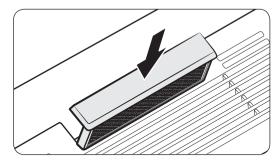

4. Reinsert Fresh Finish™.


(E) NOTE

- If you use a perfume with Fresh Finish™, the scent of the perfume may remain inside AIRDRESSER even after the cycle is complete.
- The cotton pad is not provided with the product.
- The effectiveness of Fresh Finish™ cannot be guaranteed since it depends on the perfume used.

! CAUTION

- Unplug the product before cleaning it.
- Do not use abrasive or flammable cleaners.
- Do not spray water directly onto the product when cleaning it.


Exterior

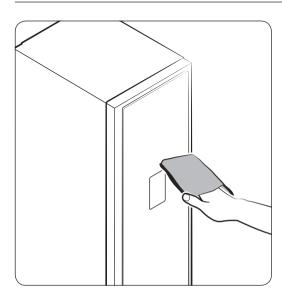


Use the cleaning cloth to clean the exterior. For stubborn stains, use a damp cloth and then wipe dry.

Water tanks


Clean both tanks on a regular basis. Completely dry before reinserting.

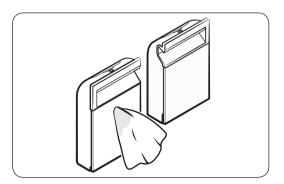

Use a damp cloth to clean the exterior.

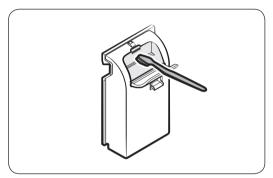

Use a soft brush to clean the interior.

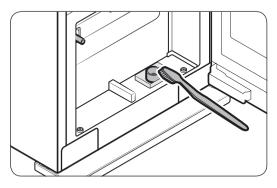


Use a soft brush to clean the tanks' inlet and outlet.

Water tray



- Empty the water tray on a regular basis.
- Make sure to reinsert the water tray after emptying the water.

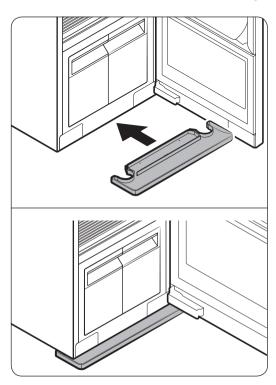


Correctly insert the water tray as shown in the figures.

• Make sure the side with TOP is facing up.


Air Filter

If you frequently use the product for heavy items or items that accumulate a large amount of dust, we recommend cleaning the Air Filter frequently.

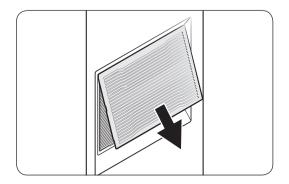


To replace the Air Filter


1. Hold the bottom of the cover and pull out.

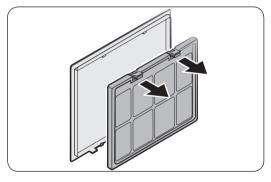

2. While pressing the two hooks on the upper part of the filter, pull to remove.

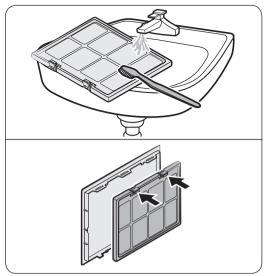


- **3.** Use a brush and running water to clean the filter.
- **4.** Completely dry the filter in a shaded area and reinsert the filter.

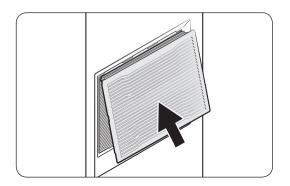

5. Insert the top of the cover into the product, and then push the cover.


Lint filter

- For best results, clean the lint filter before or after using the product.
- Replace a damaged lint filter with a new lint filter.

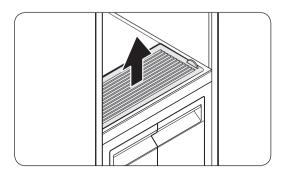


To clean the lint filter

1. Open the cover.

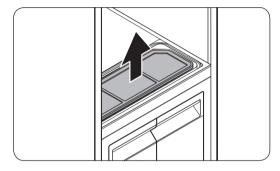

2. Remove the lint filter.

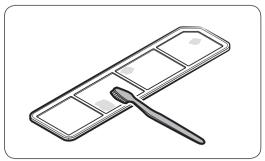

- 3. Use a brush and running water to clean the lint filter. Completely dry the lint filter in a shaded area.
- 4. Reinsert the lint filter, and then close the cover.

Descaling

Perform descaling regularly to increase the performance and lengthen the lifespan of the product. If you do not perform descaling immediately after getting the notification message, some functions may be restricted for use and may cause performance decrease or even shortens the lifespan of the product.

- 1. When the **Descaling Required** message appears on the display, remove all items from the product and then tap and hold **Sanitize** and **Drv** for 3 seconds.
- 2. Empty the Refill Tank and the Drain Tank.
- **3.** Dilute a descaling agent with water as recommended by the manufacturer.
- **4.** Fill the Refill Tank with the diluted descaling agent up to the MAX line.
- 5. Tap and hold Start/Pause ▷ to start descaling.
 - If the **Drain the tank** message appears on the display during descaling, empty the Drain Tank.
- **6.** When the **Refill/Drain the tank** message appears on the display, empty both the Refill Tank and the Drain Tank, and then rinse them thoroughly.
- 7. Fill the Refill Tank with clean water up to the MAX line, and then insert the Refill Tank and the Drain Tank.
- 8. When Supply/Drainage Complete message appears on the display, tap and hold Start/ Pause ▷
 - If the **Drain the tank** message appears on the display during descaling, empty the Drain Tank.
- 9. When descaling is complete, empty the Drain Tank and fill the Refill Tank with water.
 - You can use AIRDRESSER once you finish all these steps.

NOTE

- Vibration and noise may occur during the descaling process; this is normal, and there is no problem with the product.
- You may see the **Refill the tank** message when you use the product the first time after descaling. This is normal. Fill the Refill Tank with water and press Start/Pause ▷ I to resume.
- Bubbles may form if the descaling agent is not rinsed thoroughly. Make sure to rinse the Refill Tank and the Drain Tank thoroughly after descaling.

Moving the product to another location

- There are two wheels underneath the product to assist moving it.
- To prevent the product from tipping over when moving the product, we recommend pushing the middle of the product. Do not push the top or the bottom.
- Empty the Refill Tank and the Drain Tank before moving the product to another location. If the tanks are not emptied, water can spill while moving the product.

Troubleshooting

Notification messages

Message	Action	
Refill the tank Refill the tank with water	 Check if the Refill Tank has enough water. Fill the water up to the MAX line, reinsert the Refill Tank, and then tap Start/Pause ▷ to start. Check if the Refill Tank is properly inserted. Properly insert the Drain Tank, and then tap Start/Pause ▷ to start. 	
Drain the tank Drain water from the tank	 Check if the Drain Tank is full. Empty the Drain Tank, reinsert the Drain Tank, and then tap Start/Pause ▷ I to start. Check if the Drain Tank is properly inserted. Properly insert the Refill Tank, and then tap Start/Pause ▷ I to start. 	
Door Open Close the door & Start again	Check if the door is open. Make sure the door is closed, and then tap Start/Pause ▷ to start.	
Abnormality Alert Open the Door & Check Inside	 Check if the door is open and if Child Lock is on. Make sure the door is closed, and then tap Start/Pause ▷ to start. Make sure children or pets are not in the product. 	
WIFI Not Connected Check the router	Check if the router is off. Turn the router on, and then connect to the Internet.	



If a problem persists, contact a local Samsung service centre.


Troubleshooting

Checkpoint

Problem	Action		
The product does not turn on.	 Tap Power () to turn the product on. Make sure the power cord is properly plugged in. Make sure the circuit breaker is on. Make sure the power cord is plugged into a power outlet rated for this product. 		
The product does not operate.	 Make sure the door is closed, and then tap Start/Pause ▷II. If you hear water flowing or boiling sounds, the product is preparing for a steam process. This is normal. Make sure Child Lock is off. The product may not operate if you have used any liquid other than water. Please contact a Samsung service centre. 		
The product makes sounds.	 The product may generate sounds when the compressor operates. This is normal. The product may generate sounds when it circulates air. This is normal. The product may generate sounds before and during a steam process. This is normal. The product may generate sounds to pump out and drain the water. This is normal. When opening the door, sounds may come from the Refill Tank when the water is flowing through the pipe. This is normal. If noises become louder, contact a Samsung service centre. 		
The control panel does not work.	 After plugging in the product, wait for a moment and try again. The control panel will respond 10 seconds after the power cord has been plugged in. Clean the control panel and try again. If the problem continues, contact a Samsung service centre. 		
The product vibrates.	Make sure the product is installed on a solid, level surface.Make sure the product is level.		
The Refill Tank is empty after one use.	 The product consumes more water the first time it is used. This is normal. 		
Steam or air is coming out from the door.	Make sure there are no items caught in the door.Make sure the door is properly closed.		

Problem	Action		
Operation time continues to increase.	Wet items may take longer to dry. Operation time can increase depending on the quantity and moisture level of the items.		
Items are wet after a cycle.	 Make sure the lint filter is clean and properly inserted. Make sure the door gasket is not damaged or items are not caught on the door. If the door gasket is damaged, unplug the power cord and contact a Samsung service centre. 		
Items are not deodorised.	 Wash items with strong odours or items that have been stored for a long time. Wash items contaminated by oils. Large items such as down-filled jackets may not be deodorised well. Put large items by themselves and run an additional cycle if necessary. Do not put items with strong odour with other items. Separate items by odour strength. Make sure the lint filter and both tanks are clean. 		
Wrinkles are not removed.	Iron items that have been stored for a long time.		
Smoke comes out from the product when the door is opened.	Some cycles generate steam that may appear to be smoke. This is normal.		

Specifications

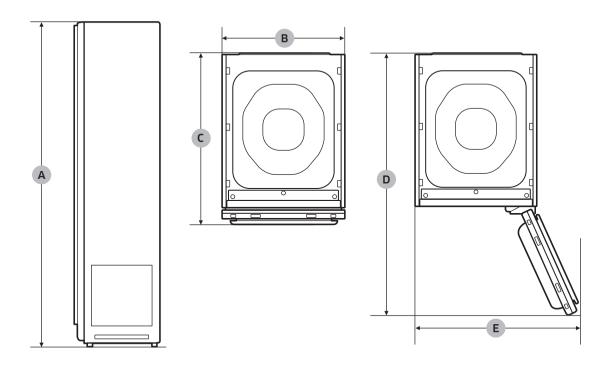

Туре		Clothing Care System (AIRDRESSER)	
		DF60*8****G	
Dimensions (mm)	A. Height	1850	
	B. Width		445
	C. Depth	615	
	D. Depth with door open	1001	
	E. Width with door open	618	
Rated power		220-240 V / 50 Hz	
		1700-1900 W	
Fuse (Fixed fuse in main PBA)		250 V / 12 A	
		Tube type	High breaking capacity type
Weight (kg)		89.0	

Memo

SAMSUNG

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	www.samsung.com/au/support

